WW90H7410E*

Washing Machine

user manual

Planet First 100% Recycled Paper

This manual is made with 100% recycled paper.

Imagine the possibilities

Thank you for purchasing this Samsung product.
To receive a more complete service, please register your product at

www.samsung.com/register

SAMSUNG

WW90H7410EW-03403S-03_EN.indd 1 2014/5/23 16:49:24

Contents

Safety information 3
- What you need to know about safety instructions ... 3
- Important safety symbols ... 3
- Important safety precautions ... 4
- Instruction about the WEEE ... 10

Installation 11
- What's included ... 11
- Installation requirements ... 12
- Step-by-step installation ... 14

Before you start 18
- Initial settings ... 18
- Laundry guidelines ... 19
- Detergent drawer guidelines ... 21

Operations 23
- Control panel ... 23
- Simple steps to start ... 24
- Course overview ... 25
- Settings ... 28

Maintenance 29
- Eco Drum Clean ... 29
- Smart Care ... 30
- Emergency drain ... 31
- Cleaning ... 32
- Recovery from freezing ... 35
- Care against an extended time of disuse ... 35

Troubleshooting 36
- Checkpoints ... 36
- Information codes ... 37

Specifications 38
- Protecting the environment ... 38
- Declaration of conformity ... 38
- Fabric care chart ... 39
- Specifications ... 40
- Sheet of household washing machines ... 41
- Information of main washing programmes ... 43

WW90H7410EW-03403S-03_EN.indd 2 2014/5/23 16:49:24

Safety information

Congratulations on your new Samsung washing machine. This manual contains important information on the installation, use and care of your appliance. Please take some time to read this manual to take full advantage of your washing machine's many benefits and features.

What you need to know about safety instructions

Please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance. Please store the manual in a safe location close to the appliance for future reference. Use this appliance only for its intended purpose as described in this instruction manual.
Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution and care when installing, maintaining and operating your washing machine.
Because the following operating instructions cover various models, the characteristics of your washing machine may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service centre or find help and information online at www.samsung.com.

Important safety symbols

What the icons and signs in this user manual mean:

⚠	WARNING: Hazards or unsafe practices that may result in **severe personal injury, death and/or property damage.**
⚠	CAUTION: Hazards or unsafe practices that may result in **personal injury and/or property damage.**
	NOTE

These warning signs are here to prevent injury to yourself and others.
Please follow them explicitly.
After reading this manual, store it in a safe place for future reference.

Read all instructions before using the appliance.

As with any equipment that uses electricity and moving parts, potential hazards exist. To safely operate this appliance, familiarize yourself with its operation and exercise care when using it.

WW90H7410EW-03403S-03_EN.indd 3 2014/5/23 16:49:24

Important safety precautions

WARNING: To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

Do not let children (or pets) play in or on your washing machine. The washing machine door does not open easily from the inside and children may be seriously injured if trapped inside.

This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

For use in Europe: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This appliance should be positioned so that the power plug, the water supply taps, and the drain pipes are accessible.

For appliances with ventilation openings in the base, that a carpet must not obstruct the openings.

The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.

WW90H7410EW-03403S-03_EN.indd 4 2014/5/23 16:49:24

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

⚠ WARNING: Critical installation WARNINGS

The installation of this appliance must be performed by a qualified technician or service company.

- Failure to do so may result in electric shock, fire, an explosion, problems with the product, or injury.

The appliance is heavy, therefore take care when lifting it.

Plug the power cord into an AC 220 - 240 V / 50 Hz wall socket or higher and use the socket for this appliance only. Never use an extension cord.

- Sharing a wall socket with other appliances using a power strip or extending the power cord may result in electric shock or fire.
- Ensure that the power voltage, frequency, and current are the same as those of the product specifications. Failure to do so may result in electric shock or fire. Plug the power plug into the wall socket firmly.

Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.

- Unplug the power plug and clean it with a dry cloth.
- Failure to do so may result in electric shock or fire.

Plug the power plug into the wall socket so that the cord is running towards the floor.

- If you plug the power plug into the socket in the opposite direction, the electric wires within the cable may be damaged and this may result in electric shock or fire.

Keep all packaging materials out of the reach of children as these may be dangerous.

- If a child places a bag over its head, it may suffocate.

When the appliance, power plug or power cord is damaged, contact your nearest service centre.

This appliance must be properly grounded.

Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.

- This may result in electric shock, fire, an explosion, or problems with the product.
- Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national regulations.

Do not install this appliance near a heater or any inflammable material.

Do not install this appliance in a humid, oily or dusty location, or in a location exposed to direct sunlight or water (rain drops).

Do not install this appliance in a location exposed to low temperatures.

- Frost may cause the tubes to burst.

WW90H7410EW-03403S-03_EN.indd 5 2014/5/23 16:49:24

Do not install this appliance in a location where gas may leak.
- This may result in electric shock or fire.

Do not use an electric transformer.
- This may result in electric shock or fire.

Do not use a damaged power plug, damaged power cord, or loose wall socket.
- This may result in electric shock or fire.

Do not pull or excessively bend the power cord.

Do not twist or tie the power cord.

Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.
- This may result in electric shock or fire.

Do not pull the power cord when unplugging the power plug.
- Unplug the power plug by holding the plug.
- Failure to do so may result in electric shock or fire.

⚠ CAUTION: Installation CAUTIONS

This appliance should be positioned in such a way that the power plug is easily accessible.
- Failure to do so may result in electric shock or fire due to electric leakage.

Install your appliance on a solid, level floor that can support its weight.
- Failure to do so may result in abnormal vibrations, movement, noise, or problems with the product.

Do not install this appliance in a location exposed to low temperatures.
- Frost may cause the tubes to burst.

⚠ WARNING: Critical usage WARNINGS

If the appliance is flooded, turn off the water & power supplies immediately and contact your nearest service centre.
- Do not touch the power plug with wet hands.
- Failure to do so may result in electric shock.

If the appliance generates a strange noise, a burning smell, or smoke, unplug the power plug immediately and contact your nearest service centre.
- Failure to do so may result in electric shock or fire.

In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug. Do not touch the appliance or power cord.
- Do not use a ventilating fan.
- A spark may result in an explosion or fire.

Do not let children play in or on the washing machine. In addition, when disposing of the appliance, remove the washing machine door lever.
- If trapped inside the product, children may suffocate to death.

WW90H7410EW-03403S-03_EN.indd 6 2014/5/23 16:49:24

Make sure to remove the packaging (sponge, styrofoam) attached to the bottom of the washing machine before using it.

Do not wash items contaminated with gasoline, kerosene, benzene, paint thinner, alcohol or other inflammable or explosive substances.

- This may result in electric shock, fire, or an explosion.

Do not open the washing machine door by force while it is operating (high-temperature washing/drying/spinning).

- Water flowing out of the washing machine may result in burns or cause the floor to be slippery. This may result in injury.
- Opening the door by force may result in damage to the product or injury.

Do not insert your hand under the washing machine while an operation is in progress.

- This may result in injury.

Do not touch the power plug with wet hands.

- This may result in electric shock.

Do not turn the appliance off by unplugging the power plug while an operation is in progress.

- Plugging the power plug into the wall socket again may cause a spark and result in electric shock or fire.

Do not let children or the infirm use this washing machine without proper supervision. Do not let children climb in or onto the appliance.

- This may result in electric shock, burns or injury.

Do not insert your hand or a metal object under the washing machine while it is operating.

- This may result in injury.

Do not unplug the appliance by pulling the power cord. Always grip the plug firmly and pull it straight out of the outlet.

- Damage to the power cord may cause a short-circuit, fire and/or electric shock.

Do not attempt to repair, disassemble, or modify the appliance yourself.

- Do not use a fuse (such as copper, steel wire, etc.) other than a standard fuse.
- When the appliance needs to be repaired or reinstalled, contact your nearest service centre.
- Failure to do so may result in electric shock, fire, problems with the product, or injury.

If the water supply hose comes loose from the water tap and floods the appliance, unplug the power plug.

- Failure to do so may result in electric shock or fire.

Unplug the power plug when the appliance is not being used for long periods of time or during a thunder or lightning storm.

- Failure to do so may result in electric shock or fire.

If any foreign substance enters into the appliance, unplug the power plug and contact you nearest Samsung Customer Service.

- This may result in electric shock or fire.

WW90H7410EW-03403S-03_EN.indd 7 2014/5/23 16:49:24

⚠ CAUTION: Usage CAUTIONS

When the washing machine is contaminated by a foreign substance such as detergent, dirt, food waste, etc., unplug the power plug and clean the washing machine using a damp, soft cloth.

- Failure to do so may result in discolouration, deformation, damage, or rust.

The front glass may be broken by a strong impact. Take care when using the washing machine.

- If the glass is broken, it may result in injury.

After a water supply failure or when reconnecting the water supply hose, open the water tap slowly.

Open the water tap slowly after a long period of non-use.

- The air pressure in the water supply hose or the water pipe may damage a product part or result in a water leak.

If a draining error occurs during an operation, check if there is a draining problem.

- If the washing machine is used when it is flooded because of a draining problem, it may result in electric shock or fire.

Insert the laundry into the washing machine completely so that the laundry does not get caught in the door.

- If laundry gets caught in the door, it may result in damage to the laundry or the washing machine, or result in a water leak.

Turn the water supply off when the washing machine is not being used.

Ensure that the screws on the water supply hose connector are properly tightened.

- Failure to do so may result in property damage or injury.

Ensure that the rubber seal and front door glass are not contaminated by a foreign substance (e.g. waste, thread, hair, etc.).

- If a foreign substance is caught in the door or the door is not completely closed, it may cause a water leak.

Open the water tap and check if the water supply hose connector is firmly tightened and that there is no water leak before using the product.

- If the screws on the water supply hose connector are loose, it may result in a water leak.

The product you have purchased is designed for domestic use only.

Using the product for business purposes qualifies as a product misuse. In this case, the product will not be covered by the standard warranty provided by Samsung and no responsibility can be attributed to Samsung for malfunctions or damages resulting from such misuse.

Do not stand on the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.

- This may result in electric shock, fire, problems with the product, or injury.

Do not spray volatile material such as insecticide onto the surface of the appliance.

- As well as being harmful to humans, this may result in electric shock, fire or problems with the product.

WW90H7410EW-03403S-03_EN.indd 8 2014/5/23 16:49:24

Do not place objects that generate electromagnetic fields near the washing machine.
- This may result in injury due to a malfunction.

Water drained during a high-temperature wash or drying cycle is hot. Do not touch the water.
- This may result in burns or injury.

Do not wash, spin, or dry water-proof seats, mats, or clothing (*) unless your appliance has a special cycle for washing these items.
(*): Woollen bedding, rain covers, fishing vests, ski pants, sleeping bags, diaper covers, sweat suits, and bicycle, motor cycle and car covers, etc.
- Do not wash thick or hard mats even if the washing machine mark is on the care label. This may result in injury or damage to the washing machine, walls, floor, or clothing due to abnormal vibrations.
- Do not wash throw rugs or doormats with rubber backing. The rubber backing may come off and stick to inside the drum, and this may result in malfunction such as a drainage error.

Do not operate the washing machine when the detergent drawer is removed.
- This may result in electric shock or injury due to a water leak.

Do not touch the insides of the drum during or just after drying as it is hot.
- This may result in burns.

Do not insert your hand into the detergent drawer.
- This may result in injury as your hand may be caught by the detergent input device.

Do not place any objects (such as shoes, food waste, animals) other than laundry into the washing machine.
- This may result in damage to the washing machine, or injury and death in the case of pets due to the abnormal vibrations.

Do not press the buttons using sharp objects such as pins, knifes, fingernails, etc.
- This may result in electric shock or injury.

Do not wash laundry contaminated by oils, creams or lotions usually found in skincare shops or massage clinics.
- This may cause the rubber seal to become deformed and result in a water leak.

Do not leave metal objects such as safety pins, hair pins or bleach in the drum for long periods of time.
- This may cause the drum to rust.
- If rust starts appearing on the surface of the drum, apply a (neutral) cleansing agent to the surface and use a sponge to clean it. Never use a metal brush.

Do not use dry cleaning detergent directly and do not wash, rinse, or spin laundry contaminated by dry cleaning detergent.
- This may result in spontaneous combustion or ignition due to the heat from the oxidation of the oil.

Do not use water from water cooling/heating devices.
- This may result in problems with the washing machine.

WW90H7410EW-03403S-03_EN.indd 9 2014/5/23 16:49:24

Do not use natural hand-washing soap for the washing machine.

- If it hardens and accumulates inside the washing machine, it may result in problems with the product, discolouration, rust, or bad odours.

Place socks and brassieres in a washing net and wash them with the other laundry.

Do not wash large laundry items such as bedding in the washing net.

- Failure to do so may result in injury due to abnormal vibrations.

Do not use hardened detergent.

- If it accumulates inside the washing machine, it may result in a water leak.

Make sure that the pockets of all the clothing items to be washed are empty.

- Hard, sharp objects such as coins, safety pins, nails, screws, or stones can cause extensive damage to the appliance.

Do not wash clothing with large buckles, buttons or other heavy metal objects.

Sort the laundry by color on the basis of its colorfastness and select the recommended cycle, water temperature and additional functions.

- This may result in discoloration or fabric damage.

Take care that children's fingers are not caught in the door when you close it.

- Failure to do so may result in injury.

⚠ WARNING: Critical cleaning WARNINGS

Do not clean the appliance by spraying water directly onto it.

Do not use the a strong acidic cleaning agent.

Do not use benzene, thinner or alcohol to clean the appliance.

- This may result in discolouration, deformation, damage, electric shock or fire.

Before cleaning or performing maintenance, unplug the appliance from the wall socket.

- Failure to do so may result in electric shock or fire.

WW90H7410EW-03403S-03_EN.indd 10 2014/5/23 16:49:24

Installation

Follow these instructions carefully to ensure a proper installation of the washing machine, and to prevent accidents when doing the laundry.

What's included

Make sure all the parts are included in the product package. If you have a problem with the washing machine or the parts, contact a local Samsung customer center or the retailer.

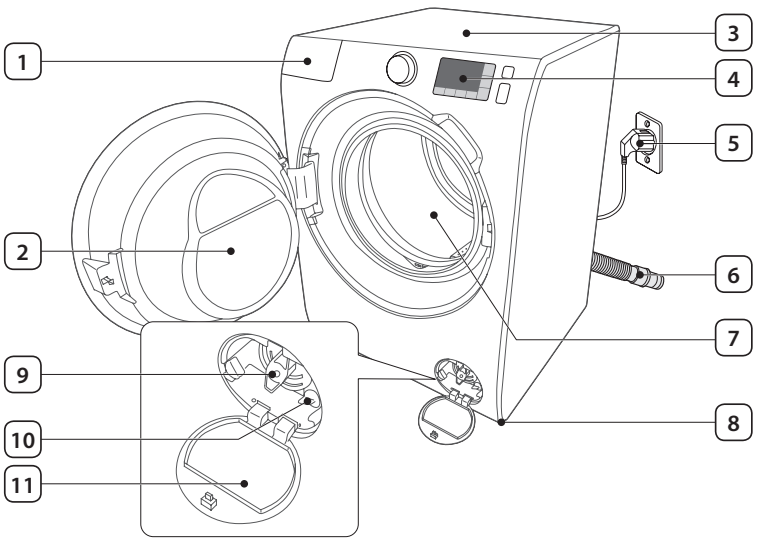

1	Detergent drawer
2	Door
3	Work top
4	Control panel
5	Power plug
6	Drain hose
7	Drum
8	Levelling feet
9	Debris filter
10	Emergency drain tube
11	Filter cover

Spanner

Bolt caps



Hose guide

Cap fixer

Cold water supply hose

Hot water supply hose



Liquid detergent container

- **Bolt hole covers** : The number of bolt hole covers depends on the model (3~6 covers).
- **Hot water supply hose** : Applicable models only.
- **Liquid detergent container** : Applicable models only.

WW90H7410EW-03403S-03_EN.indd 11 2014/5/23 16:49:25

Installation requirements

Electrical supply and grounding

- AC 220-240 V / 50 Hz fuse or circuit breaker equipped
- Individual branch circuit specific to the washing machine

To ensure a proper grounding, the washing machine comes with a power cord featuring a threeprong grounding plug for use in a properly installed and grounded outlet.

Check with a qualified electrician or serviceperson if you are not sure about the grounding.

Do not modify the provided plug. If it does not fit the outlet, call a qualified electrician and install a proper outlet.

WARNING

- Do NOT use an extension cord.
- Use only the power cord that comes with the washing machine.
- Do NOT connect the ground wire to plastic plumbing, gas lines, or hot water pipes.
- Improperly connected grounding conductors may cause electric shock.

Water supply

A proper water pressure for this washing machine is between 50 kPa and 800 kPa. Water pressures less than 50 kPa may cause the water valve not to close completely. Or, it may take a longer time to fill the drum, turning off the washing machine resultantly. Water taps must be within 120 cm from the rear of the washing machine so that the provided inlet hoses reach the washing machine.

To reduce a risk of leak

- Make water taps easily accessible.
- Turn off taps when the washing machine is not in use.
- Check for any leak at water inlet hose fittings on a regular basis.

CAUTION: Before using the washing machine for the first time, check all connections at the water valve and taps for any leak.

WW90H7410EW-03403S-03_EN.indd 12 2014/5/23 16:49:25

Drain

Samsung recommends a standpipe in height of 65cm. The drain hose must be connected through the hose clip to the standpipe, and the standpipe must fully cover the drain hose.

Flooring

For best performance, the washing machine must be installed on a solid floor. Wood floors may need to be reinforced to minimize vibration and/or unbalanced loads. Carpeting and soft tile surfaces are not a good resistance to vibrations and may cause the washing machine to move slightly during the spin cycle.

⚠ **CAUTION**: Do NOT install the washing machine on a platform or a poorly supported structure.

Water temperature

Do not install the washing machine in areas where water may freeze as the washing machine always retains some water in its water valves, pumps, and/or hoses. Frozen water left in the connection parts may cause damage to belts, the pump, and other components of the washing machine.

Alcove or closet installation

Minimum clearance for a stable operation:

Sides	25 mm	Rear	50 mm
Top	25 mm	Front	500 mm

If both the washing machine and a dryer are installed in one location, the front of the alcove or closet must have at least 500 mm unobstructed air opening. Your washing machine alone does not require a specific air opening.

WW90H7410EW-03403S-03_EN.indd 13 2014/5/23 16:49:25

Step-by-step installation

STEP 1 - Select a location

Location requirements:

- Solid, level surface without carpeting or flooring that may obstruct ventilation
- Away from direct sunlight
- Adequate room for ventilation and wiring
- The ambient temperature is always higher than the freezing point (0 ˚C)
- Away from a heat source

STEP 2 - Remove the shipping bolts

Unpack the product package and remove all shipping bolts.

1. Loosen all shipping bolts on the rear of the machine using the supplied spanner.

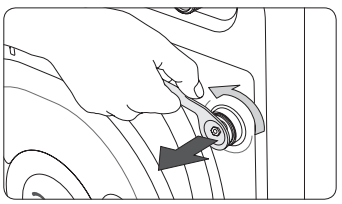

2. Fill the holes with the supplied plastic bolt caps.
Keep the shipping bolts for future use.

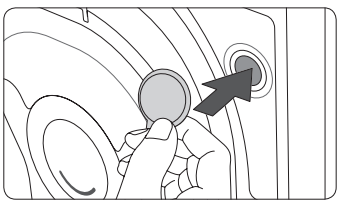

WARNING

Packaging materials can be dangerous to children. Dispose all packaging material (plastic bags, polystyrene, etc.) out of children's reach.

STEP 3 - Adjust the levelling feet

1. Gently slide the washing machine into position. Excessive force may damage the levelling feet.

2. Level the washing machine by manually adjusting the levelling feet.

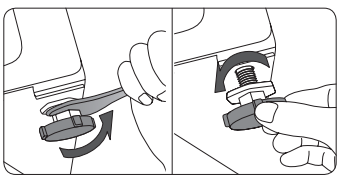

3. When levelling is complete, tighten the nuts using the spanner.

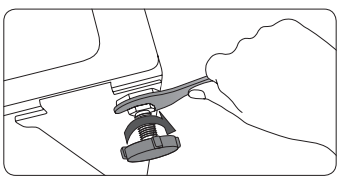

WW90H7410EW-03403S-03_EN.indd 14 2014/5/23 16:49:25

STEP 4 - Connect the water hose

Connect the water supply hose to the water tap.

1. Remove the **adaptor (A)** from the **water supply hose (B)**.

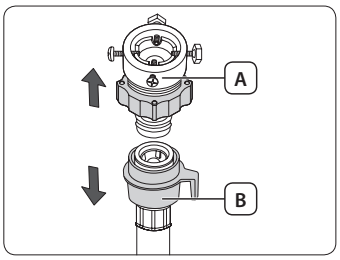

2. Use a Philips screwdriver to loosen four screws on the adaptor.

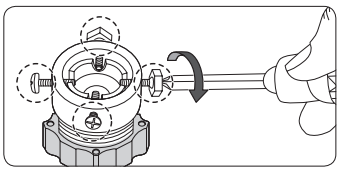

3. Hold the adaptor and turn **part (C)** in the arrow direction to loosen it by 5 mm (*).

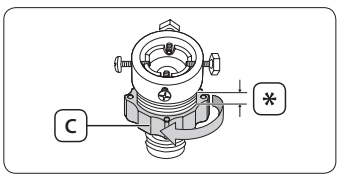

4. Insert the adaptor into the water tap, and tighten the screws while lifting up the adaptor.

5. Turn **part (C)** in the arrow direction to tighten it.

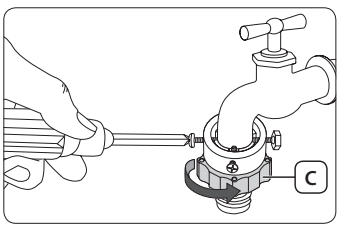

6. While holding down **part (E)**, connect the water supply hose to the adaptor. Then, release **part (E)**. The hose fits into the adaptor with a clicking sound.

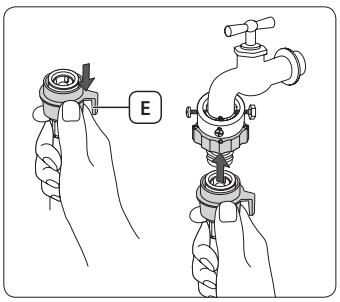

WW90H7410EW-03403S-03_EN.indd 15 2014/5/23 16:49:25

7. Connect the other end of the water supply hose to the inlet valve on the back of the washing machine. Turn the hose clockwise to tighten.

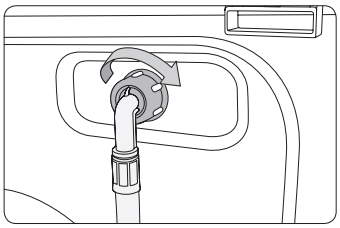

8. Open the water tap and check if there are any leaks around the connection areas. If there are water leaks, repeat the steps above.

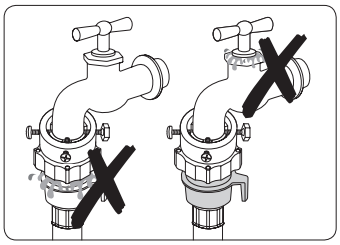

- If using a screw type of water tap, connect the water hose to the water tap as shown.
- Use a popular type of water taps. If the current tap is squareshaped or too big, remove the spacer ring before inserting the adaptor into the water tap.

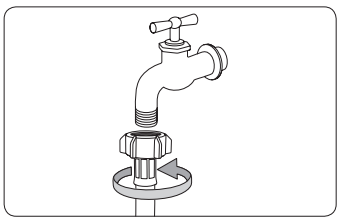

WARNING

Stop using the washing machine if there is a water leak, and contact a local Samsung service centre. Otherwise, this may cause electric shock.

CAUTION

Do not stretch the water supply hose by force. If the hose is too short, replace the hose with a longer, high-pressure hose.

- After connecting the water supply hose to the adaptor, check if it is connected properly by pulling the water supply hose downwards.
- Use a popular type of water taps. If the tap is square-shaped or too big, remove the spacer ring before inserting the tap into the adaptor.

For models having an additional hot water inlet:

1. Connect the red end of the hot water supply hose to the hot water inlet on the back of the machine.

2. Connect the other end of the hot water supply hose to the hot water tap.

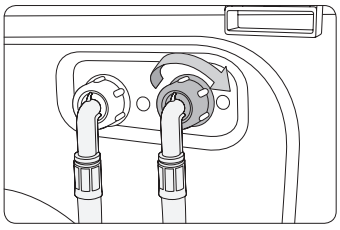

WW90H7410EW-03403S-03_EN.indd 16 2014/5/23 16:49:26

Aqua hose (applicable models only)

The aqua hose alerts users of a risk of water leaks. It senses the water flow and turns red on the centre **indicator (A)** in case of a leak.

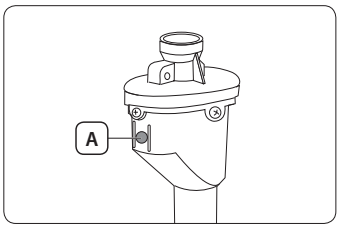

STEP 5 - Position the drain hose

The drain hose can be positioned in three ways:

Over the edge of a wash basin

The drain hose must be placed at a height of between 60 cm and 90 cm (*) from the floor. To keep the spout of the drain hose bent, use the supplied **plastic hose guide (A)**. Secure the guide to the wall using a hook to ensure stable drainage.

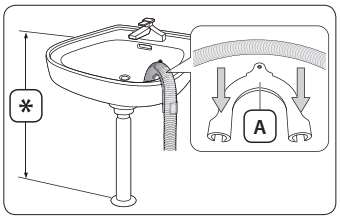

In a sink drain pipe

The drain pipe must be above the sink siphon so that the end of the hose is at least 60 cm above the floor.

In a drain pipe

The drain pipe should be between 60 cm and 90 cm high (*). It is advisable to use a 65 cm high vertical pipe. Make sure the drain hose is connected to the stand pipe at a slant.

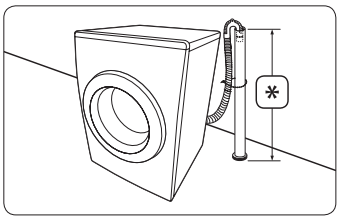

Drain standpipe requirements:

- Minimum diameter of 5 cm
- Minimum carry-away capacity of 60 litres per minute

STEP 6 - Turn on the washing machine

TPlug the power cord into a wall socket featuring an AC 220-240V / 50Hz approved electrical outlet protected by a fuse or circuit breaker. Then, press the **Power** button to turn on the washing machine.

WW90H7410EW-03403S-03_EN.indd 17 2014/5/23 16:49:26

Before you start

Initial settings

Run Calibration mode (recommended)
Samsung washing machine detects the laundry weight automatically. For more accurate weight detection, please run Calibration Mode after the installation. Calibration mode is done by following the steps below.

1. Remove laundry or any contents in the machine and turn off the machine.
2. Press the **Power** button and release it, and then press the **Temp** button and **Delay End** button simultaneously. Then the machine turns on.
3. Press the **Start/Pause** button to activate “Calibration Mode”.
4. The drum rotates clockwise and counterclockwise approximately for 3 minutes.
5. When “Calibration Mode” is finished, “**END(En)**” appears on the display, and the machine automatically turns off. The washing machine is now ready for use.

WW90H7410EW-03403S-03_EN.indd 18 2014/5/23 16:49:26

Laundry guidelines

STEP 1 - Sort

Sort the laundry according to these criteria:

- **Care Label**: Sort the laundry into cottons, mixed fibres, synthetics, silks, wools and rayon.
- **Colour**: Separate whites from colours.
- **Size**: Mixing different-sized items together in the drum improves the washing performance.
- **Sensitivity**: Wash delicate items separately using an EasyIron option for pure, new woollen items, curtains and silk items. Check the labels on the items.

Make sure to check the care label on the clothing, and sort them accordingly before starting the wash.

STEP 2 - Empty pockets

Empty all the pockets of your laundry items.

- Metal objects such as coins, pins, and buckles on clothing may damage other laundry items as well as the drum.

Turn clothing with buttons and embroiders inside out.

- If zips of pants and jackets are open while washing, the drum may be damaged. Zips should be closed and fixed with a string.
- Clothing with long strings may become entangled with other clothes. Be sure to fix the strings before starting the wash.

STEP 3 - Use a laundry net

- Brassieres (water washable) must be placed in a laundry net. Metal parts of the brassieres may break through and rip other laundry items.
- Small, light clothing such as socks, gloves, stockings and handkerchiefs may become caught around the door. Place them inside a fine laundry net.
- Do not wash the laundry net by itself without other laundry. This may cause abnormal vibrations that could move the washing machine and result in injury.

STEP 4 - Prewash (if necessary)

Add a Prewash option to the selected course with a protein-based detergent for cotton items that are contaminated severely.

WW90H7410EW-03403S-03_EN.indd 19 2014/5/23 16:49:26

STEP 5 - Determine the load capacity

Do not overload the washing machine or the laundry may not wash properly. For the load capacity for the type of cothing, see page 25.

When washing bedding or bedding covers, the wash time may be lengthened or the spin efficiency may be reduced. For bedding or bedding covers, the recommended maximum spin cycle speed is 800 rpm and the load capacity is 2.0 kg or less.

CAUTION: If the laundry is unbalanced and the “UE” error code is displayed, redistribute the load. Unbalanced laundry may reduce the spinning performance.

STEP 6 - Apply a proper detergent

The type of detergent depends on the type of fabric (cotton, synthetic, delicate items, wool), colour, wash temperature, and degree of soiling. Always use “low suds” laundry detergent, which is designed for automatic washing machines.

- Follow the detergent manufacturer’s recommendations based on the weight of the laundry, the degree of soiling, and the hardness of the water in a local area. If you are not sure about the water hardness, contact a local water authority.
- Do not use detergent that tends to be hardened or solidified. This detergent may remain after the rinse cycle, blocking the drain outlet.

CAUTION: Use only a neutral liquid detergent for wool in the Wool course. A powder detergent with the Wool course may remain on the laundry and discolour the laundry.

WW90H7410EW-03403S-03_EN.indd 20 2014/5/23 16:49:26

Detergent drawer guidelines

The washing machine provides a three-compartment dispenser: the left compartment for the main wash, the centre for fabric softeners, and the right for the preliminary wash.

Ⅰ	Prewash detergent compartment
Ⅱ	Main wash detergent compartment: powder detergents, water softeners, pre-soaking agents, bleach, and stain removers
❀	Fabric softener compartment

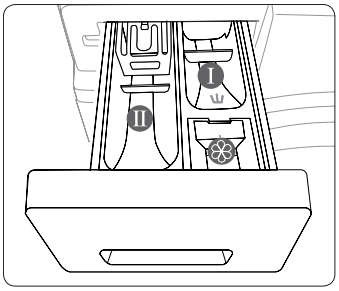

CAUTION

- Do not open the detergent drawer while the washing machine is operating.
- Do not use the following types of detergent:
  - Tablet or capsule types
  - Ball or net types
- To prevent the compartment clogging, concentrated or highly-enriched agents (fabric softener or detergent) must be diluted with water before applied.

The detergent drawer is located at the top-left corner of the washing machine.

1. Slide open the detergent drawer.

2. Apply an appropriate amount of detergent to the left compartment (Ⅱ).
To use a liquid detergent, see the Liquid detergent guide below.

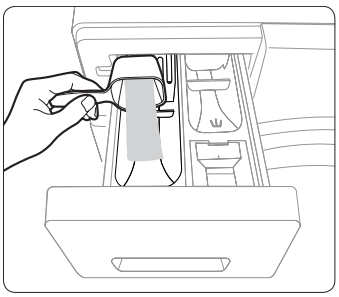

3. Apply an appropriate amount of fabric softener to the centre compartment (❀) if necessary.
Do not exceed the max line (A) which is marked on the compartment.

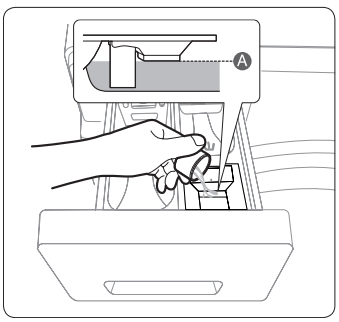

WW90H7410EW-03403S-03_EN.indd 21 2014/5/23 16:49:27

4. If selecting the Prewash option, apply an appropriate amount of detergent to the right compartment (Ⅰ).
5. Slide the detergent drawer inward to close it.

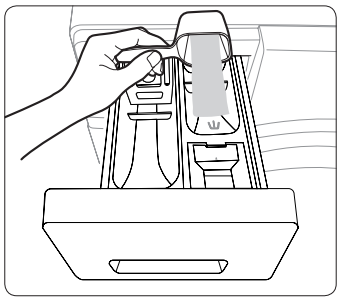

Liquid detergent container (Applicable models only)

To use a liquid detergent, first put the provided **liquid detergent container (A)** in the main wash detergent compartment (Ⅱ). Then, apply an appropriate amount of detergent to the container. Do not exceed the max line which is marked on the inner of the container.

⚠ **CAUTION**: Remove the liquid detergent container if using a powder detergent.

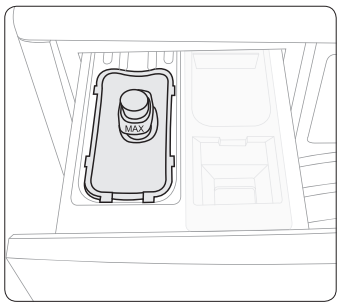

WW90H7410EW-03403S-03_EN.indd 22 2014/5/23 16:49:27

Operations

Control panel

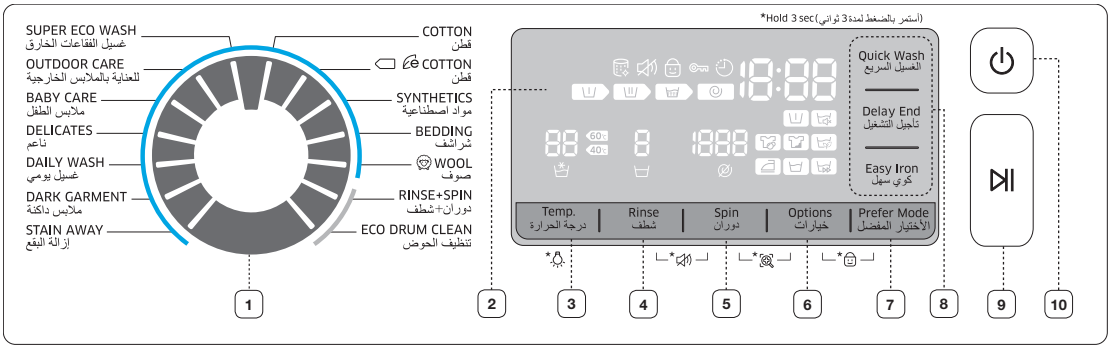

1	**Course Selector**	Turn the dial to select a course.
2	**Display area**	Displays information of remaining washing time, and settings.
3	**Temp.**	Press to change the water temperature for the current course. Press and hold for 3 seconds to turn on/off the Drum Light.
4	**Rinse**	Press to change the rinse times for the current course. You can set the rinse times up to 5.
5	**Spin**	Press to change the spinning speed for the current course. • **Rinse Hold**: The final rinse cycle is suspended so that the laundry remains in the water. To unload the laundry, run a drain or spin cycle. • **No Spin**: The drum does not spin after the final drain cycle.
6	**Options**	Press to select an option. Each time you press this button, the option selection changes in this sequence: Soak > Intensive > Prewash > Soak + Intensive > Soak + Prewash > Intensive + Prewash > Soak + Intensive + Prewash > off
7	**Prefer Mode**	Press to enter custom options screen. 3 custom options are available but multiple selection is not allowed.
8	**Frequent options**	Three frequent options are provided separately for easy access. To select or deselect, press the corresponding button.
9	**Start/Pause**	Press to start or stop an operation.
10	**Power**	Press to turn on/off the washing machine.

WW90H7410EW-03403S-03_EN.indd 23 2014/5/23 16:49:28

Simple steps to start

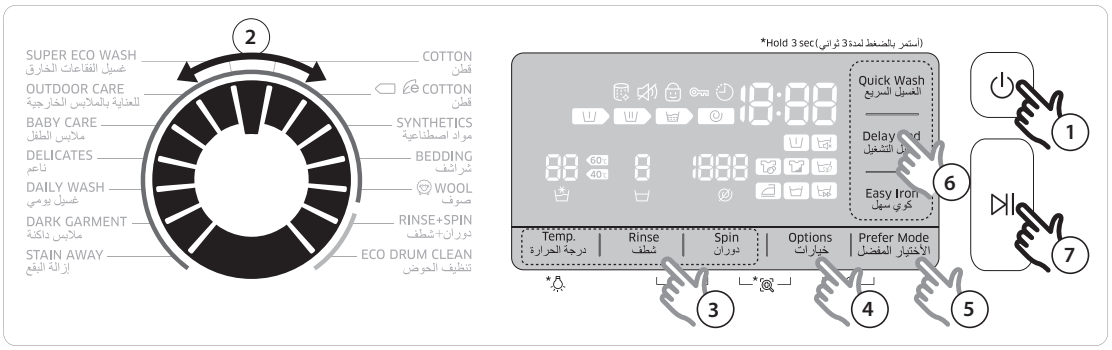

1. Press the **Power** button to turn on the washing machine.
2. Turn the Course Selector to select a course.
3. Change the course settings (**Temperature**, **Rinse**, and **Spin**) as necessary.
4. To add an option, press the **Options** button repeatedly until the corresponding option icon(s) turns on.
5. To select a preferred mode, press the **Prefer Mode** button repeatedly until the corresponding mode icon turns on.
6. To add a frequent option, press the corresponding button (**Quick wash**, **Delay End**, and **Easy Iron**).
7. Press the **Start/Pause** button.

To change the course during operation

1. Press the **Start/Pause** button to stop operation.
2. Select a different course.
3. Press the **Start/Pause** button again to start the new course.

WW90H7410EW-03403S-03_EN.indd 24 2014/5/23 16:49:28

Course overview

Standard courses

Course	Description & Max load (kg)	
COTTON	• For cottons, bed linens, table linens, underwear, towels, or shirts. • The washing time and the number of rinse cycles are automatically adjusted according to the load.	Max
COTTON	• Optimal performance with lower energy for cotton fabrics, bed linens, table linens, underwear, towels, or shirts.	Max
SYNTHETICS	• For blouses or shirts that are made of polyester (diolen, trevira), polyamide (perlon, nylon), or the like.	3.5
BEDDING	• For bed spreads, bed sheets, bedding covers, etc. • For best results, wash only 1 type of bedding and make sure the load weighs less than 2 kg.	2
WOOL	• Specific for machine-washable wool for loads less than 2.0 kg. • The wool course features gentle cradling and soaking to protect the wool fibres from shrinkage/distortion. • A neutral detergent is recommended.	2
SUPER ECO WASH	• Low-temperature Eco Bubble contributes to power saving.	4
OUTDOOR CARE	• For mountain clothes, skiwear, and sportswear that are made of functional materials such as spandex, stretch, and micro-fiber	2
BABY CARE	• Featuring a high-temperature wash and extra rinses to ensure that no powder detergent remains.	4
DELICATES	• For sheer fabrics, bras, lingerie (silk), and other handwash-only fabrics.	2
DAILY WASH	• Fast completion within approximately an hour for daily items such as underwear and shirts.	4
DARK GARMENT	• Featuring additional rinses and reduced spinning to ensure that the laundry is washed gently and rinsed thoroughly.	4
STAIN AWAY	• Featuring the soaking cycle to effectively remove stains from the laundry. During the soaking cycle, the drum stops rotating. This is not a system failure.	4
RINSE+SPIN	• Featuring an additional rinse after applying fabric softener to the laundry.	-
ECO DRUM CLEAN	• Specific to drum cleaning and removes dirt and bacteria from the drum. • Perform once every 40 washes with no detergent or bleach applied. • Make sure the drum is empty. • Do not use any cleaning agents for cleaning the drum.	-

WW90H7410EW-03403S-03_EN.indd 25 2014/5/23 16:49:28

Options

Option		Description
	Prewash	• This will add a priliminary washing cycle before the main wash cycle.
	Intensive	• For badly soiled laundry. The operation time for each cycle is longer than normal.
	Soak	• This option effectively removes stains by soaking the laundry. • Each soak cycle spins the drum for 1 minute and stands still for 4 minutes, totaling 6 times for 30 minutes.
-	Quick Wash	• Specific to less soiled garments with less than a 2kg load. • It takes about 15 minutes, depending on the conditions such as the water pressure, water hardness, and/or extra options selected. • The Quick Wash time increases in this sequence: Off > 15 min > 20 min > 30 min > 40 min > 50 min > 60 min. • A recommended amount of detergent is less than 20g (for a 2kg load).
	Delay End	• The displayed time refers to the end time of a selected course. • You can set the time of Delay End in hourly units more than estimated time of current cycle. • Set the Delay End time between 1 hour and 19 hours.
	Easy Iron	• The spinning speed increases to reduce wrinkles of the laundry. • Set the spinning speed up to 800 rpm.

Prefer Mode

Mode		Description
	Speed Wash	• This changes the course settings to reduce the overall washing time. • The recommended laundry load is less than 4.0 kg for the COTTON course with Speed Wash enabled.
	Eco Wash	• FThis changes the course settings to save the overall power consumption.
	Silent Wash	• This changes the course settings to reduce operating noise and vibration.

WW90H7410EW-03403S-03_EN.indd 26 2014/5/23 16:49:29

Delay End

You can set the washing machine to finish the current course at specific hours later.

This is useful if you want to finish the wash by the time you come home from business.

1. Select a course. Then change the course settings if necessary.
2. Press the **Delay End** button repeatedly to set the Delay End time.
3. Press the **Start/Pause** button.

Case study

You want to finish a two-hour course after 3 hours from now. For this, you add the Delay End option to the current course with the 3-hour setting, and press the **Start/Pause** button at 2:00 p.m. Then, what happens? The washing machine starts operating at 3:00 p.m., and ends at 5:00 p.m. Provided below is the time line for this case.

WW90H7410EW-03403S-03_EN.indd 27 2014/5/23 16:49:29

Settings

Child Lock

To prevent accidents by children or infants, Child Lock locks all buttons.

- To set or release the Child Lock, press and hold the **Options** and **Prefer Mode** buttons simultaneously for 3 seconds.

To add detergent or more laundry in the drum, or to change the course settings in the Child Lock state, you must first release the Child Lock.

Sound

Mute or unmute the sound.

- To mute or unmute the sound, press and hold the **Rinse** and **Spin** buttons simultaneously for 3 seconds.

Drum Light

- To turn the Drum Light on or off, press and hold the **Temp.** button for 3 seconds.
- The drum light turns off automatically after 5 minutes.

WW90H7410EW-03403S-03_EN.indd 28 2014/5/23 16:49:29

Maintenance

Keep the washing machine clean to prevent deteriorated performance, and to preserve the life cycle.

Eco Drum Clean

Perform this course regularly to clean the drum, and to remove bacteria from it.

1. Press the **Power** button to turn on wasing machine.
2. Turn the **Course Selector** to select a **Eco Drum Clean**.
3. Press the **Start/Pause** button.

The water temperature for Eco Drum Clean is set to 70 °C, which cannot be changed.

CAUTION: Do not use any cleaning agents for cleaning the drum. Chemical residues in the drum deteriorates the washing performance.

Eco Drum Clean reminder

The Eco Drum Clean reminder appears on the main screen once every 40 washes.
Run the Eco Drum Clean cycle. It is advisable to perform the Eco Drum Clean regularly.
When you first see this reminder, you can ignore the reminder for 6 consecutive times. From the 7th wash, the reminder does not appear. However, it appears again on the second 40th wash.

WW90H7410EW-03403S-03_EN.indd 29 2014/5/23 16:49:29

Smart check

To enable this function, you must first download the "**Samsung Smart Washer**" app from Google Play or App Store, and install it on a mobile device featuring the camera operation.
The Smart Check function has been optimized for:
Galaxy & iPhone series (cannot be supported for some models)

1. Press and hold the **Spin** and **Options** buttons simultaneously for 3 seconds to enter the Smart Check mode.
2. The washing machine starts the self-diagnosis procedure, and display an error code if an error is found.
3. Run the **Samsung Smart Washer** app on your mobile device, and tap **Smart Check**.
4. Present the mobile device to the washing machine's display panel so that the mobile device and the washing machine face each other. Then, the error code will be recognized automatically by the app.
5. When the error code is recognized correctly, the app provides detailed information for the error with further actions.

- The function name, Smart Check, may differ depending on the language.
- If the washing machine reflects light on the display, the app may fail to recognize the error code.
- If the app fails to recognize the Smart Check code consecutively, enter the error code manually onto the app screen.

WW90H7410EW-03403S-03_EN.indd 30 2014/5/23 16:49:29

Emergency drain

In case of a power failure, drain the water inside the drum before taking out the laundry.

1. Unplug the power cord of the washing machine from the main socket.
2. Gently press the top area of the filter cover to open.

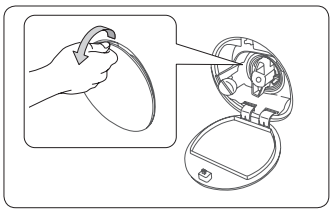

3. Gently pull out the emergency drain tube.

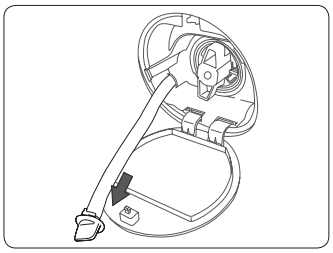

4. While holding the end of the drain tube, open the tube cap.

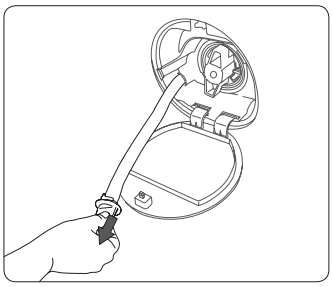

5. Let the water run into a container.
6. Close the tube cap, and reinsert the drain tube.
7. Close the filter cover.

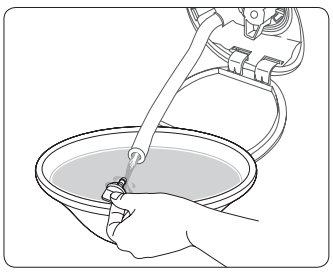

WW90H7410EW-03403S-03_EN.indd 31 2014/5/23 16:49:29

Cleaning

Surface of the washing machine

Use a soft cloth with a nonabrasive household detergent. Do not spray water onto the washing machine.

Mesh filter

Clean the mesh filter of the water supply hose once or twice a year.

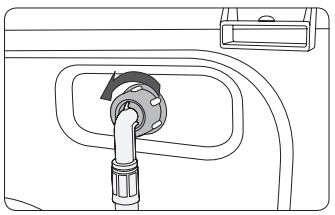

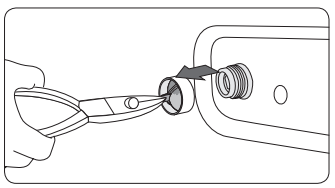

1. Turn off the washing machine, and unplug the power cord.
2. Close the water tap.
3. Loosen and disconnect the water supply hose from the back of the washing machine. Cover the hose with a cloth to prevent water from gushing out.
4. Use pliers to pull out the mesh filter from the inlet valve hole.
5. Soak the mesh filter deeply in water so that the threaded connector is also soaked.
6. Dry the mesh filter completely in the shade.
7. Reinsert the mesh filter into the water supply hose, and place the water supply hose in the original position.
8. Open the water tap.

If the mesh filter is clogged, an error code of "**4E**" appears on the screen.

WW90H7410EW-03403S-03_EN.indd 32 2014/5/23 16:49:30

Debris filter

It is advisable to clean the debris filter 5 or 6 times a year to prevent its clogging. A clogged debris filter may reduce the bubble effect.

1. Turn off the washing machine, and unplug the power cord.
2. Drain the remaining water inside the drum by referring to "**Emergency drain**" on page 31.
3. Open the filter cover using a coin or key.
4. Turn the debris filter cap to the left, and drain off the remaining water.
5. Remove the debris filter.

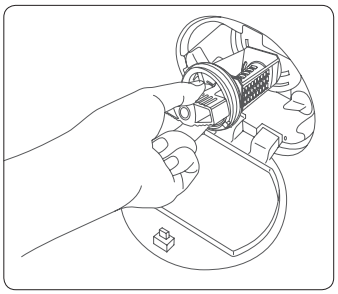

6. Clean the debris filter using soft brushes. Make sure the drain pump propeller inside the filter is unclogged.
7. Reinsert the debris filter, and turn the filter cap to the right.

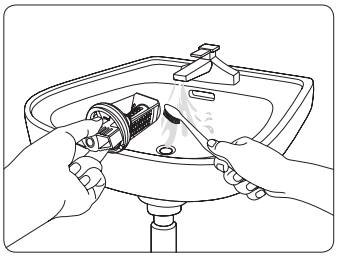

- To open the safety filter cap, push in and turn it anticlockwise. The spring of the cap helps to open the cap.
- To close the safety filter cap, turn it clockwise. The spring makes a rattling sound, which is normal.

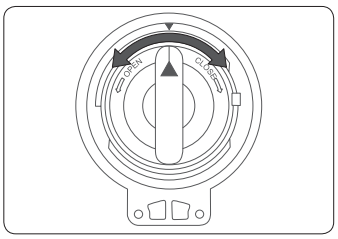

- If the debris filter is clogged, an error code of "**5E**" appears on the screen.l

CAUTION

- Make sure the filter cap is closed properly after cleaning the filter. Otherwise, this may cause a leak.
- Make sure the filter is inserted properly after cleaning it. Otherwise, this may cause an operational failure or a leak.

WW90H7410EW-03403S-03_EN.indd 33 2014/5/23 16:49:30

Detergent drawer

1. While holding down the **release lever (A)** on the inner of the drawer, slide open the drawer.
2. Remove the **release lever** and the liquid detergent container from the drawer.

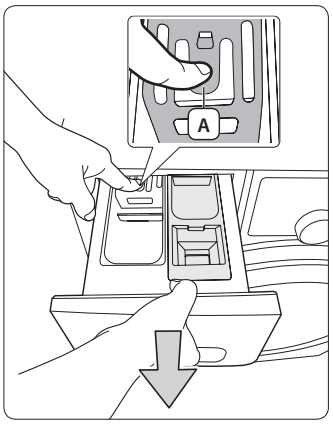

3. Clean the drawer components in flowing water using a soft brush.

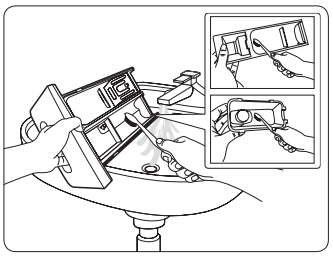

4. Clean the drawer recess using a soft brush.
5. Reinsert the **release lever (A)** and the liquid detergent container to the drawer.
6. Slide the drawer inward to close it.

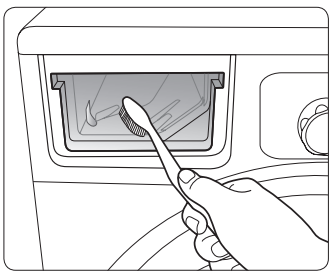

To remove remaining detergent, perform the Rinse + Spin course with the drum being empty.

WW90H7410EW-03403S-03_EN.indd 34 2014/5/23 16:49:30

Recovery from freezing

The washing machine may freeze when it drops below 0 °C.

1. Turn off the washing machine, and unplug the power cord.
2. Pour warm water over the water tap to loosen the water supply hose.
3. Disconnect the water supply hose, and soak it in warm water.
4. Pour warm water into the drum and leave it for about 10 minutes.
5. Reconnect the water supply hose to the water tap.

If the washing machine still doesn't operate normally, repeat the above steps until it operates normally.

Care against an extended time of disuse

Avoid leaving the washing machine unused for an extended time.
If this is the case, drain the washing machine and unplug the power cord.

1. Turn the Course Selector to select a **RINSE+SPIN**.
2. Empty the drum, and press **Start/Pause** button.
3. When the course is complete, close the water tap and disconnect the water supply hose.
4. Turn off the washing machine, and unplug the power cord.
5. Open the door to let air circulate through the drum.

WW90H7410EW-03403S-03_EN.indd 35 2014/5/23 16:49:30

Troubleshooting

Checkpoints

If you encounter a problem with the washing machine, first check the table below and try the suggestions.

PROBLEM	SOLUTION
Will not start	• Make sure your washing machine is plugged in. • Make sure the door is firmly closed. • Make sure the water source tap(s) are turned on. • Make sure to press the Start/Pause button.
Has no water or not enough water	• Turn the water tap on fully. • Make sure the water source hose is not frozen. • Straighten the water intake hoses. • Clean the filter on the water intake hose.
Has detergent remaining in the detergent drawer after the wash cycle is complete	• Make sure your washing machine is running with sufficient water pressure. • Make sure the detergent is added to the center of the detergent drawer.
Vibrates or is too noisy	• Make sure your washing machine is on a level surface. If the surface is not level, adjust the washing machine feet to level the appliance. • Make sure that the shipping bolts are removed. • Make sure your washing machine is not touching any other object. • Make sure the laundry load is balanced.
The washing machine does not drain and/or spin	• Straighten the drain hose. Eliminate kinked hoses. • Make sure the debris filter is not clogged.
Door is locked shut or will not open.	• The door will not open until 3 minutes after the machine stops or the power turns off.

If a problem persists, contact a local Samsung service center.

WW90H7410EW-03403S-03_EN.indd 36 2014/5/23 16:49:30

Information codes

If the washing machine fails to operate, you may see an information code on the screen. Check the table below and try the suggestions.

CODE SYMBOL	SOLUTION
dE	• Make sure the door is firmly closed. • Make sure that laundry is not caught in the door.
4E	• Make sure the source water tap is turned on. • Check the water pressure. • Clean the mesh filters of water hose.
5E	• Clean the debris filter. • Make sure the drainage hose is installed correctly. • Clean the water hose mesh filter.
UE	• The laundry load is unbalanced. Redistribute the load. If only one item of clothing needs washing, such as a bathrobe or pair of jeans, the final spin result might be unsatisfactory and an “UE” error message will be shown in the display window.
cE/3E	• Call the after-sales service.
Sd/Sud	• This occurs when too much foaming is detected. It is also displayed while foaming is removed. When the removal is finished, the normal cycle proceeds.(This is one of the normal operations. It is an error for preventing non-sensing faults.)
Uc	• If the voltage of the supplied power is instable, the washing machine will be paused to protect its electric devices. • If the correct voltage is supplied, the cycle will resume automatically.

If any information code keeps appearing on the screen, contact a local Samsung service center.

WW90H7410EW-03403S-03_EN.indd 37 2014/5/23 16:49:30

Specifications

Protecting the environment

- This appliance is manufactured from recyclable materials. If you decide to dispose of this appliance, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the door so that animals and small children cannot get trapped inside the appliance.
- Do not exceed the detergent quantities recommended in the detergent manufactures' instructions.
- Use stain removal products and bleaches before the wash cycle only when strictly necessary.
- Save water and electricity by only washing full loads (the exact amount depends upon the program used).

Declaration of conformity

This appliance complies with European safety standards, EC directive 93/68 and EN Standard 60335.

WW90H7410EW-03403S-03_EN.indd 38 2014/5/23 16:49:30

Fabric care chart

The following symbols provide garment care directions. The care labels include four symbols in this order: washing, bleaching, drying and ironing (and dry cleaning when necessary). The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow the care label directions to maximize garment life and reduce laundery problems.

	Resistant material		Can be ironed at 100 ˚C max
	Delicate fabric		Do not iron
95 95	Item may be washed at 95 ˚C	Ⓐ	Can be dry cleaned using any solvent
60 60	Item may be washed at 60 ˚C	Ⓟ	Dry clean with perchloride, lighter fuel, pure alcohol or R113 only
40 40	Item may be washed at 40 ˚C	Ⓕ	Dry clean with aviation fuel, pure alcohol or R113 only
30 30	Item may be washed at 30 ˚C		Do not dry clean
	Item may be hand washed		Dry flat
	Dry clean only		Can be hung to dry
Cl	Can be bleached in cold water		Dry on clothes hanger
	Do not bleach		Tumble dry, normal heat
	Can be ironed at 200 ˚C max		Tumble dry, reduced heat
	Can be ironed at 150 ˚C max		Do not tumble dry

WW90H7410EW-03403S-03_EN.indd 39 2014/5/23 16:49:32

Specifications

TYPE			FRONT LOADING WASHER	
DIMENSION			WW90H7410E*	
			W600mm X D600mm X H850mm	
WATER PRESSURE			50 kPa ~ 800 kPa	
WATER VOLUME			54ℓ	
NET WEIGHT			WW90H7410E*	
			73 kg	
WASH AND SPIN CAPACITY			9.0 kg	
POWER CONSUMPTION	MODEL		WW90H7410E*	
	WASHING		220 V	60 W
			240 V	60 W
	WASH AND HEATING		220 V	2000 W
			240 V	2400 W
	SPIN	MODEL	WW90H7410E*	
		230V	600 W	
	PUMPING		34 W	
SPIN REVOLUTIONS	MODEL		WW90H7410E*	
	rpm		1400	

The appearance and specifications of the product are subject to change without prior notice for purposes of product enhancement.

The energy label specifications have been determined by using the following program according to UAE.S 5010 2:2013.

- The program is “Cotton 60 ℃ + Intensive + Eco Bubble**”.**

WW90H7410EW-03403S-03_EN.indd 40 2014/5/23 16:49:32

Sheet of household washing machines

The design and specifications are subject to change without notice for quality improvement purposes.

According to Regulation (EU) No. 1061/2010

Samsung			
Model Name			WW90H7410E*
Capacity	kg		9
Energy Efficiency			
A+++ (highest efficiency) to D (least efficient)			A+++
Energy Consumption			
Annual Energy Consumption (AE_C) [1]	kWh/yr		151
Energy Consumption (E_t.60) Cotton 60 ºC at full load	kWh		0.77
Energy Consumption (E_t.60.1/2) Cotton 60 ºC with partial load	kWh		0.67
Energy Consumption (E_t.40.1/2) Cotton 40 ºC with partial load	kWh		0.51
Weighted power off-mode (P_o)	W		0.45
Weighted power in left-on mode (P_l)	W		10
Annual water consumption (AW_c) [2]	L/yr		9400
Spin efficiency class [3]			
A (most efficient) to G (least efficient)			A
Maximum Spin Speed	rpm		1400
Residual moisture	%		44
Programs to which the information on the label and the Sheet relate			Cotton 60 ºC and 40 ºC [4]
Program duration of the standard program			
Cotton 60 ºC at full load	min		270
Cotton 60 ºC for partial load	min		250
Cotton 40 ºC with partial load	min		230
Weighted time in left-on mode	min		8
Airborne noise emissions			
Wash	dB (A) re 1 pW		52
Spin	dB (A) re 1 pW		74
Dimensions			
Unit dimensions	Height	mm	850
	Width	mm	600
	Depth [5]	mm	600
Net weight	kg		73
Gross weight	kg		75
Package weight	kg		2
Water Pressure	kPa		50-800
Electrical connection			
Voltage	V		220-240
Power consumption	W		2000-2400
Frequency	Hz		50
Name of company			Samsung Electronics Co., Ltd.

WW90H7410EW-03403S-03_EN.indd 41 2014/5/23 16:49:32

1. Annual energy consumption is based on 220 standard washing cycles for ℮ COTTON course at 60 °C and 40 °C at full and partial load, and the consumption of off and left-on modes. Actual energy consumption will depend on how the appliance is used.
2. Annual water consumption is based on 220 standard washing cycles for ℮ COTTON course at 60 °C and 40 °C at full and partial load. Actual water consumption will depend on how the appliance is used.
3. Spin extraction is very important when you use a clothes dryer to dry your clothes.
   The energy for drying costs much higher than the energy for washing.
   Wasing with the high spin saves more energy in drying your clothes in a clothes dryer.
4. The ℮ COTTON 60 °C and ℮ COTTON 40 °C programs are the 'standard cotton 60 °C program' and the 'standard cotton 40 °C program'. They are suitable to clean normally soiled cotton laundry and they are the most efficient (concerning water and energy consumption) for this type of laundry.
   Please run Calibration Mode after the installation (refer to the "Run Calibration mode (recommended)" section on page 18).
   In these programs the actual water temperature may differ from the declared temperature.
5. Distance to the wall from the unit is not included in the depth dimension.

WW90H7410EW-03403S-03_EN.indd 42 2014/5/23 16:49:32

Information of main washing programmes

Model	Course	Temp (°C)	Capacity (kg)	Program Time (min)	Residual Moisture Content (%)	Water Consumption (ℓ/cycle)	Energy Consumption (kWh/Cycle)
WW90H7410E*	COTTON	20	4.5	129	50	57	0.40
	COTTON	40	4.5	229	44	40	0.51
	COTTON	60	9.0	269	41	45	0.77
			4.5	249	44	40	0.67
	SYNTHETICS	40	3.5	139	30	53	0.61

The values on the table have been measured under the conditions specified in Standard IEC60456/ EN60456. Autual values will depend on how the appliance is used.

WW90H7410EW-03403S-03_EN.indd 43 2014/5/23 16:49:32

QUESTIONS OR COMMENTS?

Country	CALL	OR VISIT US ONLINE AT
U.A.E	800-SAMSUNG (726-7864)	www.samsung.com/ae/support (English) www.samsung.com/ae_ar/support (Arabic)
JORDAN	0800-22273 06 5777444	www.samsung.com/Levant/support (English)

Code No. DC68-03403S-03_EN

WW90H7410E*

الغسالة

دليل المستخدم

Planet First 100% Recycled Paper

تم إنتاج هذا الدليل باستخدام ورق مُعاد تدويره بنسبة ١٠٠٪.

إمكانيات هائلة

نشكرك على شراء هذا المنتج من Samsung.
للحصول على خدمة أكثر تكاملاً،
الرجاء تسجيل المنتج على موقع

www.samsung.com/register

SAMSUNG

WW90H7410EW-03403S-03_AR.indd 1 2014/5/23 16:47:56

المحتويات

معلومات السلامة ٣

ما يجب أن تعرفه حول إرشادات السلامة ٣

رموز السلامة الهامة ٣

احتياطات السلامة الهامة ٤

التركيب ١١

المحتويات ١١

متطلبات التركيب ١٢

التركيب خطوة بخطوة ١٤

ما قبل بدء التشغيل ١٨

الإعدادات الأولية ١٨

دليل غسل الملابس ١٩

إرشادات خاصة بدرج مسحوق الغسيل ٢١

العمليات ٢٣

لوحة التحكم ٢٣

خطوات يسيرة وسهلة للبدء ٢٤

رؤية عامة للدورة ٢٥

إعدادات ٢٨

الصيانة ٢٩

Eco Drum Clean (تنظيف الحوض) ٢٩

Smart Check (الاختيار الذكي) ٣٠

لتصريف عند الطوارئ ٣١

التنظيف ٣٢

إصلاح حالة التجمد ٣٥

يجب الحذر رجاء بشأن الفترات الزمنية من سوء الاستخدام ٣٥

استكشاف الأخطاء وإصلاحها ٣٦

نقاط التحقق والفحص ٣٦

رموز المعلومات ٣٧

المواصفات ٣٨

حماية البيئة ٣٨

بيان التوافق ٣٨

جدول العناية بالأقمشة ٣٩

المواصفات ٤٠

صفحة الغسالات المنزلية ٤١

معلومات حول برامج الغسيل الأساسية ٤٣

WW90H7410EW-03403S-03_AR.indd 2 2014/5/23 16:47:56

معلومات السلامة

تهانينا على شرائك غسالة Samsung الجديدة. يحتوى هذا الدليل على معلومات هامة حول عملية تركيب الجهاز واستخدامه ورعايته. يرجى قراءة هذا الدليل بعناية لتتمكن من الاستفادة الكاملة من الميزات والفوائد العديدة لغسالتك.

ما يجب أن تعرفه حول إرشادات السلامة

الرجاء قراءة هذا الدليل قراءة شاملة للتأكد من أنك تعرف كيفية تشغيل الميزات والوظائف المتنوعة في جهازك الجديد بشكل آمن وفعال. الرجاء الاحتفاظ بهذا الدليل في مكان آمن بالقرب من الجهاز من أجل الرجوع إليه في المستقبل. يستخدم هذا الجهاز للغرض المخصص له فقط كما هو مذكور في دليل المالك هذا.

لا تغطي التحذيرات والتنبيهات وإرشادات السلامة الهامة التالية كافة الظروف والمواقف المحتمل التعرض لها. لذا يجب التعامل بحذر وانتباه وعناية عند تركيب الغسالة وصيانتها وتشغيلها.

نظرًا لأن إرشادات التشغيل التالية تنطبق على طرازات متعددة، فإن خصائص الغسالة الخاصة بك قد تختلف قليلاً عن تلك الموصوفة في هذا الدليل. كما أن بعض علامات التحذير المذكورة قد تكون غير قابلة للتطبيق. إذا كانت لديك أي أسئلة أو تساؤلات، اتصل بأقرب مركز خدمة أو اعثر على التعليمات والمعلومات عبر الإنترنت على موقع www.samsung.com.

رموز السلامة الهامة

تشير الرموز والعلامات الموجودة في دليل المستخدم هذا إلى ما يلي:

	تحذير: الممارسات الخطيرة أو غير الآمنة التي قد تؤدي إلى إصابات خطيرة للأفراد أو الموت و/أو تلف الغسالة.
	تنبيه: الممارسات الخطيرة أو غير الآمنة التي قد تؤدي إلى إصابات للأفراد و/أو تلف الغسالة.
	ملاحظة

تهدف علامات التحذير هذه إلى منع حدوث إصابات لك وللآخرين.

لذا الرجاء اتباعها بعناية.

احتفظ بهذا الدليل بعد قراءته في مكان آمن من أجل الرجوع إليه في المستقبل.

اقرأ كافة الإرشادات أولاً قبل استخدام الجهاز.

يوجد احتمال التعرض للمخاطر كما هو الحال مع كافة الأجهزة الكهربائية وأجزائها المتحركة. تعرف بنفسك على تشغيل هذا الجهاز وتوخّ الحذر عند استعماله حتى تتمكن من تشغيله بشكل آمن.

WW90H7410EW-03403S-03_AR.indd 3 2014/5/23 16:47:57

احتياطات السلامة الهامة

تحذير: لتقليل إمكانية نشوب حريق أو صعقة كهربائية أو إصابة للأشخاص أثناء استخدام الغسالة، قم باتباع احتياطات الأمان الأساسية بما في ذلك ما يلي:

لا تدع الأطفال (أو الحيوانات الأليفة) يلعبون فوق الغسالة أو بداخلها. حيث لا يمكن فتح باب الغسالة بسهولة من الداخل، وقد يصاب الأطفال بإصابات بالغة في حالة احتباسهم بداخلها.

لم يتم تصميم هذا الجهاز للاستخدام من قِبل أشخاص لديهم مشكلات جسدية وعقلية وحسية (بما فيهم الأطفال) أو نقص في المعرفة أو الخبرة، إلا تحت إشراف أو تعليمات بخصوص استخدامه من قِبل الشخص المسؤول عن سلامتهم.

يجب مراقبة الأطفال لضمان عدم عبثهم بالغسالة.

بالنسبة للاستخدام في أوروبا: يمكن استخدام هذا الجهاز بواسطة الأطفال الذين يبلغون من العمر ٨ سنوات أو أكبر وكذلك بواسطة الأشخاص الذين يعانون من قصور جسدي أو حسي أو عقلي أو نقص الخبرة والمعرفة بشرط خضوعهم للإشراف وتوعيتهم بالإرشادات الخاصة باستخدام الجهاز بطريقة آمنة وأن يتفهموا المخاطر الكامنة. يجب منع الأطفال من اللعب بالجهاز. ويجب ألا يقوم الأطفال بعملية التنظيف أو أعمال الصيانة التي يمكن للمستخدم القيام بها بدون إشراف.

في حالة تلف كابل الجهاز (سلك التيار الكهربائي)، يجب تغييره من قِبل الشركة المصنّعة أو وكيل الصيانة الخاص بها أو أي فني مؤهل لتفادي التعرض لأي خطر.

يجب وضع الجهاز بالقرب من مأخذ التيار الكهربائي، وصنابير توريد الماء وخراطيم تصريف الماء بحيث يسهل الوصول إليها.

بالنسبة للأجهزة ذات فتحات التهوية في قاعدتها، يتعين عدم إعاقة أو سد هذه الفتحات بالسجادة.

يجب استخدام مجموعات الخراطيم الجديدة ويجب عدم استخدام مجموعة الخراطيم القديمة.

WW90H7410EW-03403S-03_AR.indd 4 2014/5/23 16:47:57

تنبيه: ولتجنب المخاطر الناجمة عن إعادة الضبط غير القصدي للفاصل الحراري، فإنه يتعين عدم تزويد الجهاز خلال جهاز تبديل خارجي مثل المؤقت أو الاتصال بدائرة يجري تشغيلها وإيقاف تشغيلها بشكل منتظم بواسطة خاصية ما.

⚠ تحذير: تحذيرات هامة عند التركيب

يجب أن يتم تركيب هذا الجهاز بواسطة فني مؤهل أو شركة صيانة متخصصة.

- قد ينتج عن الفشل في اتباع هذه التعليمات حدوث صدمة كهربائية أو حريق أو انفجار أو مشاكل تتعلق بالمنتج أو التعرض للإصابة.

يجب توخي الحذر عند رفع الجهاز لأن وزنه ثقيل.

قم بتوصيل سلك الطاقة بمقبس حائط من ٢٢٠ فولت/ ٦٠ هرتز أو أعلى من ذلك. ولا تستخدم المقبس إلا لتشغيل هذا الجهاز. ممنوع استخدام كبلات إضافية.

- قد يؤدي مشاركة مقبس الحائط مع أجهزة أخرى باستخدام سلك طاقة أو مد سلك الطاقة إلى حدوث صدمة كهربائية أو حريق.
- تأكد من أن الجهد الكهربي للطاقة والتردد والتيار مطابقة للقياسات الخاصة بمواصفات المنتج. يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق. لذا، تأكد من توصيل سلك الطاقة في مقبس الحائط بإحكام.

قم بإزالة أي مواد خارجية مثل الأتربة أو الماء من النهايات الطرفية لسلك الطاقة ونقاط الاتصال باستخدام قطعة قماش جافة بشكل منتظم.

- قم بإلغاء توصيل سلك الطاقة وتنظيفه باستخدام قطعة قماش جافة.
- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق.

قم بتوصيل القابس الكهربي "الفيشة" في مقبس التيار الكهربي بالحائط بحيث يتم تمديد سلك التيار الكهربي نحو الأرضية.

- إذا قمت بتوصيل سلك الطاقة في المقبس في الاتجاه المعاكس، فقد تتلف الأسلاك الكهربائية الموجودة داخل الكبل وقد يؤدي هذا الأمر إلى حدوث صدمة كهربية أو حريق.

احتفظ بجميع مواد التغليف بعيدًا عن متناول الأطفال لأنها قد تمثل خطرًا عليهم.

- قد يؤدي وضع الطفل لكيس فوق رأسه إلى إصابته بالاختناق.

في حالة تلف الجهاز أو سلك الطاقة أو موصل الطاقة، اتصل بأقرب مركز صيانة إليك.

يجب بتثبيت هذا الجهاز على الأرض بشكل سليم.

لا تقم بتثبيت الجهاز على الأرض بجانب أنبوب غاز أو أنبوب ماء بلاستيكي أو خط تليفون.

- قد ينتج عن هذا الأمر حدوث صدمة كهربائية أو حريق أو انفجار أو مشاكل تتعلق بالمنتج.
- لا تقم بتوصيل سلك التيار الكهربي في مقبس غير مؤرض بشكل صحيح وتأكد من توافق هذا المقبس مع القوانين المحلية والوطنية.

يجب عدم تركيب هذا الجهاز بالقرب من سخان أو مواد قابلة للاشتعال.

يجب عدم تركيب هذا الجهاز في بيئة رطبة أو موقع به زيت أو أتربة أو في مكان يتعرض لضوء الشمس المباشر والماء (قطرات المطر).

يجب عدم تركيب هذا الجهاز في موقع تكون درجة حرارته منخفضة.

- قد يؤدي الجليد إلى انفجار الأنابيب.

WW90H7410EW-03403S-03_AR.indd 5 2014/5/23 16:47:57

يجب عدم تركيب هذا الجهاز في موقع يكون به تسرب للغاز.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو حريق.

لا تستخدم محول كهربي.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو حريق.

لا تستخدم سلك طاقة تالف أو كبل طاقة تالف أو مقبس حائط غير محكم.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو حريق.

يجب عدم جذب سلك الطاقة أو ثنيه بقوة.

يجب عدم لف سلك الطاقة أو طيه.

يجب عدم تعليق سلك الطاقة فوق كائن معدني أو وضع كائن ثقيل فوق سلك الطاقة أو إدراج كائنات بين سلك الطاقة أو دفع سلك الطاقة في المساحة الموجودة خلف الجهاز.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو حريق.

يجب عدم جذب سلك الطاقة، أثناء عدم توصيل موصل الطاقة.

- قم بفصل موصل الطاقة عن طريق الإمساك بالموصل.
- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق.

تنبيه: تنبيهات خاصة بالتركيب

ينبغي وضع هذا الجهاز بطريقة يمكن من خلالها الوصول بسهولة إلى قابس التيار الكهربي.

- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق نتيجة لتسريب الكهرباء.

يجب تركيب جهازك على أرضية مستوية وصلبة تتحمل وزن الجهاز.

- قد ينتج عن الفشل في اتباع هذه التعليمات وجود اهتزازات أو حركات أو ضوضاء أو مشاكل غير طبيعية تتعلق بالمنتج.

يجب عدم تركيب هذا الجهاز في موقع تكون درجة حرارته منخفضة.

- قد يؤدي الجليد إلى انفجار الأنابيب.

تحذير: تحذيرات هامة عند استعمال هذا الجهاز

في حالة تعرض الجهاز لكمية زائدة من الماء، قم بإيقاف تشغيل المياه وقطع اتصال الكهرباء بشكل فوري، واتصل بأقرب مركز صيانة.

- لا تلمس سلك التيار الكهربي بيدين مبتلتين.
- قد ينتج عن هذا الأمر وجود صدمة كهربية.

في حالة إصدار الجهاز لضوضاء غير طبيعية، أو رائحة اشتعال أو دخان، قم بإلغاء توصيل سلك الطاقة فورًا واتصل بأقرب مركز للصيانة.

- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق.

في حالة وجود تسريب للغاز (مثل غاز البروبان أو LP وما إلى ذلك)، يجب تهوية المكان فورًا بدون لمس سلك الطاقة. لا تقم بلمس الجهاز أو سلك الطاقة.

- لا تستخدم مروحة تهوية.
- قد ينتج عن الشرارة حدوث صدمة كهربية أو حريق.

لا تدع الأطفال يلعبون فوق الغسالة أو بداخلها. كذلك، يجب إزالة حامل باب الغسالة عند التخلص من الجهاز.

- قد يموت الأطفال اختناقًا في حالة احتباسهم داخل هذه الغسالة.

WW90H7410EW-03403S-03_AR.indd 6 2014/5/23 16:47:57

تأكد من إزالة الغلاف (الإسفنج، الفوم) المرفق بأسفل الغسالة قبل الاستخدام.

يجب عدم غسل العناصر العالق بها الجاز أو الكيروسين أو البنزين أو تنر الطلاء أو الكحول أو أي مواد أخرى قابلة للاشتعال أو الانفجار.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو حريق أو انفجار.

يجب عدم فتح باب الغسالة بالقوة أثناء التشغيل (الغسل/التجفيف/التنشيف عند درجة حرارة عالية).

- قد ينتج عن اندفاع الماء خارج الغسالة حدوث الإصابة بالحروق أو التسبب في أن تصبح الأرض منزلقة. قد ينتج عن هذا الأمر إصابات شخصية.
- قد يؤدي فتح الباب بالقوة إلى تلف المنتج أو الإصابة.

لا تدخل يديك تحت الغسالة أثناء وجودها قيد التشغيل.

- قد ينتج عن هذا الأمر إصابات شخصية.

لا تلمس سلك التيار الكهربي بيدين مبتلتين.

- قد ينتج عن هذا الأمر وجود صدمة كهربية.

يجب عدم إيقاف تشغيل الجهاز عن طريق قطع اتصال سلك الطاقة أثناء تشغيل الجهاز.

- قد يؤدي توصيل سلك الطاقة مرة أخرى بالمقبس إلى حدوث شرارة ينتج عنها صدمة كهربية أو حريق.

لا تسمح للأطفال أو ذوي الاحتياجات الخاصة باستخدام هذه الغسالة دون الإشراف عليهم بشكل مناسب. لا تسمح للأطفال بالتسلق داخل هذا الجهاز أو فوقه.

- قد يؤدي ذلك إلى التعرض لصدمة كهربية، أو الإصابة بالحروق أو وقوع إصابات أخرى.

لا تضع يدبك أو أي كائن معدني أسفل الغسالة أثناء تشغيلها.

- قد ينتج عن هذا الأمر إصابات شخصية.

لا تنزع قابس الجهاز عن طريق سحب سلك التيار الكهربي نفسه. أمسك القابس "الفيشة" دائمًا بإحكام واسحبها في خط مستقيم إلى خارج مقبس التيار الكهربي.

- قد يؤدي تلف السلك إلى حدوث ماس كهربي أو حريق و/أو صدمة كهربية.

لا تحاول إصلاح الجهاز أو فكه أو تعديله بنفسك.

- يجب عدم استخدام أي منصهر (مثل النحاس أو سلك معدني وما إلى ذلك) خلاف المنصهر القياسي.
- اتصل بأقرب مركز خدمة لك عندما يكون من الضروري إصلاح هذا الجهاز أو إعادة تركيبه.
- قد يؤدي عدم الالتزام بذلك إلى التعرض لصدمة كهربية أو نشوب حريق أو وقوع مشكلات متعلقة بالمنتج أو وقوع إصابات.

عندما يصبح خرطوم التزوّد بالماء غير محكم وينتج عنه تسريب للماء في الجهاز، يجب فصل سلك الطاقة من مأخذ الكهرباء.

- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق.

قم بنزع قابس الطاقة في حال عدم استخدام الجهاز لفترات زمنية طويلة أو أثناء الرعد/ العاصفة البرقية.

- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق.

انزع قابس التيار الكهربي "الفيشة" واتصل بأقرب مركز لخدمة عملاء Samsung في حالة دخول أي مواد غريبة إلى هذا الجهاز.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو حريق.

WW90H7410EW-03403S-03_AR.indd 7 2014/5/23 16:47:57

تنبيه: تنبيهات الاستعمال

عندما يعلق بالغسالة مادة غريبة مثل المنظفات أو الأتربة أو مخلفات الطعام وما إلى ذلك، قم بإلغاء توصيل سلك الطاقة وتنظيف الغسالة باستخدام قطعة قماش مبللة وناعمة.

- يؤدي الفشل في الالتزام بهذا الأمر إلى وجود تغيير في الألوان أو التشويه أو التلف أو الصدأ.

قد ينكسر الزجاج الأمامي نتيجة حدوث اصطدام قوي. يجب الحرص عند استخدام الغسالة.

- عندما ينكسر الزجاج قد تحدث إصابة.

عند حدوث فشل في توريد الماء أو عند إعادة توصيل خرطوم توريد الماء، يجب فتح الصنبور ببطء.

يجب فتح الصنبور ببطء في حالة عدم الاستخدام لفترة طويلة.

- قد يؤدي وجود ضغط الهواء في خرطوم توريد الماء أو أنبوب الماء إلى تلف جزء من الغسالة أو وجود تسريب للماء.

في حالة حدوث خطأ يتعلق بالتصريف أثناء التشغيل، تحقق من وجود مشكلة تتعلق بالتصريف.

- إذا تم استخدام الغسالة أثناء انسياب الماء خارجها بسبب مشكلة في الصرف، فإن ذلك قد يؤدي إلى التعرض لصدمة كهربية أو نشوب حريق.

يجب إدخال غسيل في الغسالة بالكامل بحيث لا يتم تعلق الغسيل بالباب.

- في حالة تعلق الغسيل بالباب، قد يؤدي ذلك إلى تلف الغسيل أو الغسالة، كما قد ينتج عنه حدوث تسريب للماء.

أغلق خطوط إمداد المياه عند عدم استعمال الغسالة.

تأكد من إحكام مسمار توصيل خرطوم توريد الماء.

- يؤدي الفشل في الالتزام بهذا الأمر إلى تلف الجهاز أو الإصابة.

تأكد من عدم اتساخ السدادة المطاطية وزجاج الباب الأمامي بأي مواد غريبة (كالنفايات أو الخيوط، أو الشعر، أو غير ذلك).

- إذا علقت أي مادة غريبة في الباب أو لم يتم غلق الباب تمامًا، فإن ذلك قد يتسبب في تسرب المياه.

يجب فتح الصنبور والتحقق من إحكام موصل خرطوم الماء وعدم وجود تسريب للماء قبل استخدام المنتج.

- في حالة عدم إحكام المسامير أو موصل خرطوم توريد الماء، قد يحدث تسريب للماء.

تم تصميم المنتج الذي قمت بشرائه للاستخدام المنزلي فقط.

يُعد استخدام المنتج لأغراض العمل سوء استخدام له. وفي هذه الحالة، لا يتم تغطية المنتج من قبل الضمان الأساسي الذي تقدمه شركة Samsung، كما أن شركة Samsung لا تتحمل أية مسئولية عن الأعطال أو الخسائر التي تنجم عن سوء الاستخدام.

يجب عدم الوقوف فوق الجهاز أو وضع أشياء فوقه (مثل الغسيل أو الشمعدان المشتعل أو السجائر المشتعلة أو الأطباق أو المواد الكيماوية أو الكائنات المعدنية وما إلى ذلك).

- قد ينتج عن هذا الأمر حدوث صدمة كهربائية أو حريق أو مشاكل تتعلق بالمنتج أو الإصابة.

يجب عدم رش مواد متطايرة مثل المبيدات الحشرية فوق سطح الجهاز.

- فبالإضافة إلى أن هذا الأمر يضر بالإنسان، فقد ينتج عنه أيضًا وجود صدمة كهربائية أو حريق أو مشاكل تتعلق بالمنتج.

WW90H7410EW-03403S-03_AR.indd 8 2014/5/23 16:47:57

لا تضع أية أجسام تنبعث منها مجالات كهرومغناطيسية بالقرب من هذه الغسالة.

- قد ينتج عن هذا الأمر إصابات شخصية نتيجة وجود خطأ يتعلق بالتشغيل.

تصبح مياه الصرف ساخنة عندما يتم تصريفها أثناء الغسيل في درجات حرارة عالية أو دورة التجفيف. لا تلمس مياه الصرف الساخنة.

- قد يؤدي ذلك إلى الإصابة بالحروق أو وقوع إصابات أخرى.

يجب عدم غسل المقاعد أو السجاد أو القماش (*) المضاد للماء أو تنشيفها أو تجفيفها ما لم يكن جهازك يتضمن برنامجًا خاصًا لغسل هذه العناصر.

(*): المفروشات الصوفية أو الأغطية الواقية من الأمطار أو سترات الصيد أو بنطال التزلج أو حقائب النوم أو الحفاضات أو البدل الرياضية وأغطية الدراجات والدراجات البخارية والسيارات وما إلى ذلك.

- يجب عدم غسل السجاد السميك أو الصلب حتى في حالة وجود علامة الغسالة على علامة العناية. قد يؤدي هذا الأمر إلى وجود إصابة أو تلف الغسالة أو الحوائط أو الأرضية أو الملابس نتيجة للاهتزازات غير الطبيعية.
- لا تغسل أطقم المشايات أو مسحات الأرجل التي تشتمل على دعامة خلفية مطاطية. قد تنفك هذه الدعامة الخلفية المطاطية وتلتصق داخل حلة الغسالة وقد يؤدي ذلك إلى قصور في الأداء الوظيفي كأن يحدث مثلاً عطل في التصريف.

يجب عدم تشغيل الغسالة في حالة عدم وجود درج المسحوق.

- قد ينتج عن هذا الأمر وجود صدمة كهربية أو إصابة نتيجة لتسريب الماء.

يجب عدم لمس الحوض من الداخل أثناء عملية التنشيف أو بعدها مباشرةً حيث إنه يكون ساخناً.

- قد ينتج عن هذا الأمر الإصابة بالحروق.

لا تضع يدك داخل درج مسحوق التنظيف.

- قد ينتج عن هذا إصابات شخصية حيث يمكن إصابة يديك بواسطة جهاز إدخال المسحوق.

تجنب وضع أي أشياء (مثل الأحذية وبقايا الطعام والحيوانات) غير الملابس بداخل الغسالة.

- قد يؤدي هذا الأمر إلى تلف الغسالة أو الإصابة والموت في حالة وجود حيوانات أليفة نتيجة للاهتزازات غير الطبيعية.

يجب عدم الضغط على الأزرار باستخدام كائنات حادة مثل المسامير أو السكاكين أو الأظافر وما إلى ذلك.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو إصابة.

يُحظر غسل الملابس التي تحتوي على زيوت أو كريمات أو مستحضرات العناية بالجسم، والتي تكون في الغالب موجودة في متاجر مستحضرات العناية بالبشرة أو عيادات التدليك.

- قد يتسبب ذلك في تشوه السدادة المطاطية ويؤدي إلى تسرب المياه.

يجب عدم ترك أي كائنات معدنية مثل الدبابيس أو بنس الشعر أو مواد التبييض في الحوض لفترات طويلة من الوقت.

- قد يؤدي هذا الأمر إلى صدأ الحوض.
- وفي حالة ظهور الصدأ على سطح الأنبوب، يُفضل تنظيف سطح الأنبوب باستخدام سائل تنظيف (عادي) وإسفنج في تنظيفه. يجب عدم استخدام فرشاة معدنية نهائياً.

يجب عدم استخدام سائل التنظيف بشكل مباشر. كما يجب عدم غسل الغسيل أو شطفه أو تنشيفه إذا كان يتضمن مسحوق للتنظيف الجاف.

- قد يؤدي هذا الأمر إلى وجود اشتعال فوري نتيجة للحرارة الناتجة عن تأكسد الزيت.

لا تستخدم المياه المنسابة من أجهزة التبريد/التسخين.

- قد ينتج عن هذا الأمر حدوث مشاكل في الغسالة.

WW90H7410EW-03403S-03_AR.indd 9 2014/5/23 16:47:57

يجب عدم استخدام صابون غسل اليدين الطبيعي مع الغسالة.

• ففي حالة التراكم والتصلب داخل الغسالة، قد تحدث مشاكل تتعلق بالمنتج مثل تغيير اللون أو الصدأ أو وجود رائحة سيئة.

يجب وضع الجوارب والصدريات في شبكة الغسيل وغسلها مع غسيل أخر.

يجب عدم غسل أنواع من الغسيل من المفروشات في شبكة الغسيل.

• يؤدي الفشل في الالتزام بهذا الأمر إلى وجود إصابة نتيجة للاهتزازات غير الطبيعية.

لا تستخدم مسحوق غسيل صلب.

• فقد يحدث تسريب للماء في حالة تراكمه داخل الغسالة.

تأكد من تفريغ جيوب الملابس التي سيتم غسلها.

• قد تتسبب الأشياء الصلبة والحادة مثل العملات المعدنية أو الدبابيس أو المسامير أو البراغي أو الأحجار في إحداث أضرار بالغة بالجهاز.

لا تقم بغسل الملابس المزودة بإبزيمات أو أزرار كبيرة الحجم أو الأشياء المعدنية الأخرى ثقيلة الوزن.

قم بفرز ملابس الغسيل وتصنيفها حسب لونها على أساس قدرتها على الاحتفاظ باللون وعدم البهتان وحدد الدورة الموصى بها، ودرجة حرارة المياه، والوظائف الإضافية.

• قد يؤدي ذلك إلى تشوه الألوان أو تلف المنسوجات.

توخَّ الحذر حتى لا تغلق باب الغسالة على أصابع الأطفال العالقة به.

• قد يتسبب عدم الالتزام بذلك في وقوع إصابة.

⚠ تحذير: تحذيرات هامة عند التنظيف

يجب عدم تنظيف الجهاز عن طريق رش الماء فوق الجهاز مباشرةً.

لا تقم باستخدام منظف يحتوي على حمض قوي.

يجب عدم استخدام البنزين أو التمر أو الكحول لتنظيف الجهاز.

• قد ينتج عن هذا الأمر وجود تغيير في اللون أو تشويه أو صدمة كهربية أو حريق.

قم بفصل قابس الجهاز من مقبس الحائط قبل تنظيفه أو صيانته.

• يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق.

WW90H7410EW-03403S-03_AR.indd 10 2014/5/23 16:47:57

التركيب

اتبع هذه التعليمات بعناية لضمان تركيب الغسالة بشكل صحيح ومنع وقوع أية حوادث عند الغسيل.

المحتويات

تأكد أن كل الأجزاء موجودة في علبة المنتج. إذا كانت تعاني مشكلة ما في الغسالة أو الأجزاء، اتصل بالمركز المحلي لخدمة عملاء سامسونج Samsung أو تاجر التجزئة.

١	درج مسحوق الغسيل
٢	باب الغسالة
٣	سطح الغسالة
٤	لوحة التحكم
٥	قابس الكهرباء
٦	خرطوم التصريف
٧	الأسطوانة
٨	استواء أرجل الغسالة
٩	مصفاة المخلفات
١٠	أنبوب التصريف عند الطوارئ
١١	غطاء المصفاة

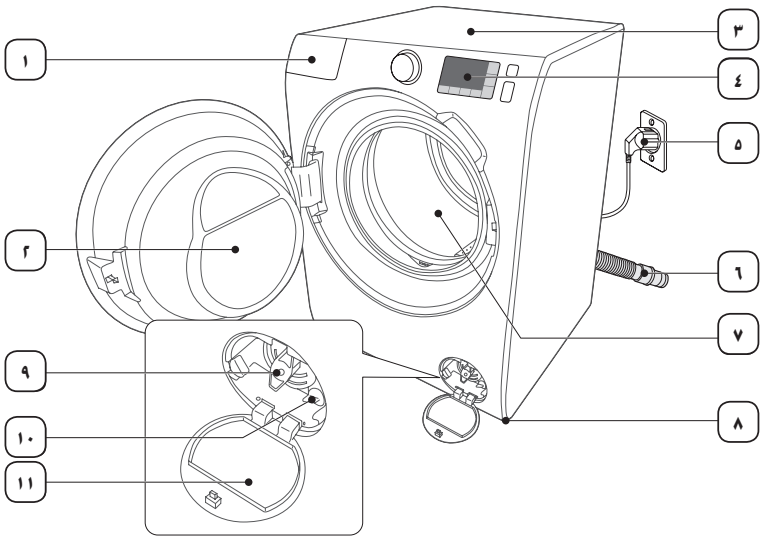

مفاتيح الربط

مسامير الأغطية



حامل الخرطوم

مثبت الغطاء

خرطوم توريد الماء البارد

خرطوم توريد الماء الساخن



حجيرة المنظف السائل

- **أغطية مفاتيح المسامير** : يعتمد عدد أغطية فتحات المسامير على الطراز (من ٣ إلى ٦ أغطية).
- **خرطوم توريد الماء الساخن** : بالموديلات المزود بها فقط.
- **حجيرة المنظف السائل** : بالموديلات المزود بها فقط.

WW90H7410EW-03403S-03_AR.indd 11 2014/5/23 16:47:58

متطلبات التركيب

مصدر الطاقة الكهربائية والتوصيل الأرضي

- قاطع دائرة كهربائية أو منصهر بقدرة ٢٢٠ فولط تيار متردد / ٦٠ هرتز
- دائرة كهربائية فرعية لتشغيل الغسالة فقط

لضمان التأريض المناسب، يجري تزويد الغسالة بسلك تيار كهربائي به قابس ذي ثلاث شوكات تأريض لاستخدامها بشكل صحيح في مقبس أرضي مُركب بشكل صحيح.

تحقق من الأمر مستعينًا بفني كهرباء أو فني خدمة إذا كنت غير متأكداً بشأن سلامة التأريض.

لا تجري أي تعديلات على القابس المزود بالغسالة. وفي حالة عدم ملاءمته مع مأخذ التيار، استعن بفني كهربائي مؤهل لتركيب مأخذ مناسب.

تحذير

- لا تستخدم كبل تمديد.
- استخدم سلك التيار الكهربائي المرفق مع الغسالة فقط.
- لا تصل السلك الأرضي بخطوط مواسير السباكة البلاستيكية أو خطوط الغاز أو مواسير المياه الساخن.
- إن موصلات التأريض المتصلة بشكل غير مناسب قد تُسبب حدوث صدمات كهربية.

الإمداد بالمياه

إن ضغط المياه المناسب لهذه الغسالة يكون بين ٥٠ كيلو باسكال إلى ٨٠٠ كيلو باسكال. إذا كان ضغط المياه أقل من ٥٠ كيلو باسكال فإن ذلك قد يسبب عدم إحكام إغلاق صمام المياه. أو ربما يستغرق الأمر وقت لملء الأسطوانة، مما يُفضي إلى إيقاف بالتبعية. يتعين أن تكون صنابير المياه ضمن مسافة ١٢٠ سم من الجانب الخلفي للغسالة لتسهيل وصول خراطيم صنابير المياه المرفقة إلى الغسالة.

لتقليل مخاطر التسرب، يتعين تنفيذ التالي

- تيسير وصول الخراطيم إلى صنابير المياه.
- إغلاق الصنابير في حالة عدم تشغيل الغسالة.
- افحص بشكل منتظم للكشف عن وجود أي تسرب في وصلات خرطوم إدخال الماء.

تنبيه: قم بفحص كافة التوصيلات الموجودة في صمام وصنابير الماء للتحقق مما إذا كانت هناك أي تسريبات قبل استخدام الغسالة للمرة الأولى.

WW90H7410EW-03403S-03_AR.indd 12 2014/5/23 16:47:58

التصريف

توصي Samsung باستخدام ماسورة رأسية يبلغ ارتفاعها ٦٥ سم. يتعين توصيل خرطوم التصريف خلال مشبك الخرطوم إلى الماسورة الرأسية ويتعين أن تغطي الماسورة الرأسية أنبوب التصريف.

سطح الأرضية

يجب تثبيت الغسالة على سطح ثابت وصلب للحصول على أفضل أداء. قد تحتاج الأسطح الخشبية إلى تقويتها لتقليل الاهتزاز و/أو الأحمال غير المتزنة. يكون السجاد وأسطح البلاط الناعمة بمثابة عوامل مساهمة في عمليات الاهتزاز واحتمالية تحرك الغسالة بشكل طفيف أثناء دورة التنشيف.

تنبيه: لا تقم بتركيب الغسالة على أرضية أو بنية ضعيفة.

درجة حرارة المياه

لا تركب الغسالة في مناطق يتعرض فيها المياه للتجمد ذلك أن الغسالة تحتفظ دومًا ببعض المياه في صمام المياه والمضخة و/ أو الخراطيم. قد يُسبب المياه المتجمد المتبقي في أجزاء التوصيل تلف السيور أو المضخة أو غير ذلك من مكونات الغسالة.

تركيب القنطرة أو الخزانة

الخلوص الأدنى للتشغيل المستقر:

الجوانب	٢٥ مم	الجانب الخلفي	٥٠ مم
الجزء العلوي	٢٥ مم	الواجهة	٥٠٠ مم

في حالة تركيب الغسالة والمجفف معاً، يجب أن يكون بالجانب العلوي للقنطرة أو الخزانة فتحة هواء خالية قدرها ٥٠٠ ملليمتر على الأقل. لا تتطلب الغسالة وحدها فتحة هواء بعينها.

WW90H7410EW-03403S-03_AR.indd 13 2014/5/23 16:47:58

التركيب خطوة بخطوة

الخطوة ١- اختيار مكان الغسالة

متطلبات المكان:

- سطح صلب مستوي دون وجود سجاد أو بلاط قد يعوق عملية التهوية
- بعيد عن أشعة الشمس المباشرة
- مساحة كافية للتهوية وتوصيل الأسلاك
- يتعين أن تكون درجة الحرارة أعلى من نقطة التجمد (٠ سلزيوس)
- بعيد عن مصادر الحرارة

الخطوة ٢ - إزالة مسامير الشحن

فك عبوة المنتج وأزل كل مسامير الشحن.

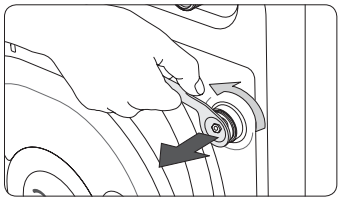

١. فك كل مسامير الشحن الموجودة على الجانب الخلفي للغسالة باستخدام مفتاح الربط المرفقة مع الغسالة.

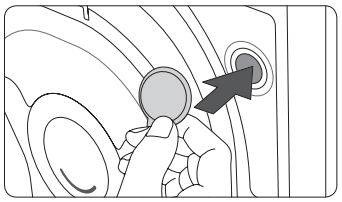

٢. غطي جميع الفتحات باستخدام أغطية المسامير البلاستيكية المرفقة مع الغسالة.
حافظ على مسامير الشحن لاستخدامها مستقبلاً عند الحاجة.

تحذير

إن مواد التغليف والتعبئة قد تمثل خطرًا على الأطفال. تخلص من جميع مواد التغليف والتعبئة (الحقائب البلاستيكية أو المواد المصنوعة من مادة البوليستيرين، الخ.) بعيداً عن متناول الأطفال.

الخطوة ٣ - ضبط أرجل استواء الغسالة

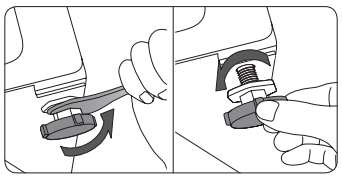

١. ضع الغسالة في المكان المحدد برفق. إن القوة المفرطة أو الزائدة قد تؤدي إلى تلف أرجل استواء الغسالة.

٢. اضبط استواء الغسالة يدويًا عن طريق ضبط أرجل الاستواء.

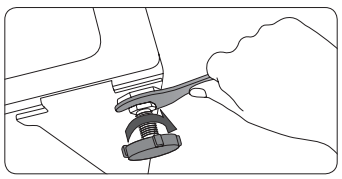

٣. بإتمام عملية الاستواء، أحكم الصواميل باستخدام مفتاح الربط.

WW90H7410EW-03403S-03_AR.indd 14 2014/5/23 16:47:58

الخطوة ٤ - توصيل خرطوم المياه

صل خرطوم الإمداد بالمياه إلى صنبور المياه.

١. أزل **المحول (A)** من **خرطوم إمداد المياه (B)**.

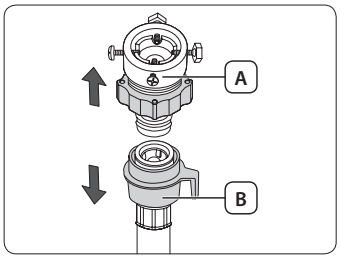

٢. استخدم مفك البراغي Philips لفك مسامير البراغي الأربعة الموجودة على المحول.

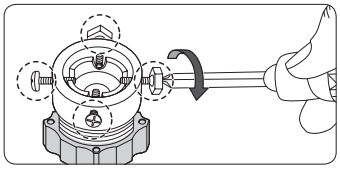

٣. أمسك المحول وأدر **الجزء (C)**في اتجاه السهم لفكه بمقدار ٥ ملليمتر (*).

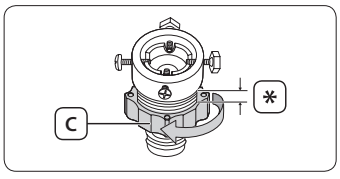

٤. ضع المحول في صنبور المياه وأحكم ربط مسامير البراغي مع رفع المحول لأعلى.

٥. أدر **الجزء (C)**في اتجاه السهم لإحكام ربطه.

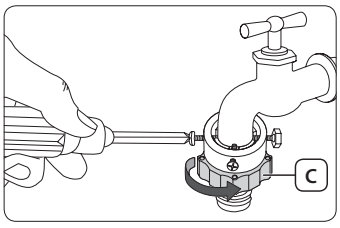

٦. مع إمساك **الجزء (E)**، لأسفل، صل خرطوم إمداد المياه إلى المحول. ثم حرر **الجزء (E)**. يركب الخرطوم بموضعه بالمحول ويُسمع صوت طقطقة.

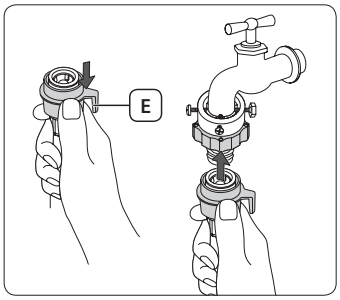

WW90H7410EW-03403S-03_AR.indd 15 2014/5/23 16:47:58

٧. صل الطرف الآخر من خرطوم إمداد المياه بصمام الدخول الموجود بالجانب الخلفي من الغسالة. أدر الخرطوم في اتجاه عقارب الساعة لإحكام ربطه.

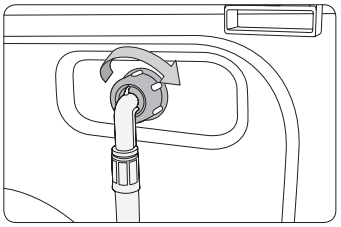

٨. افتح صنبور المياه وتحقق من وجود أي تسريبات حول أماكن التوصيلات. كرر الخطوات السابقة في حالة وجود تسرب بالمياه.

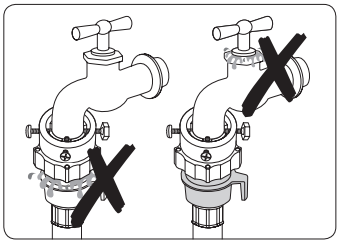

- إذا كنت تستخدم صنبور مياه من النوع البرغي، صل خرطوم المياه إلى الصنبور كما هو موضح بالشكل.
- استخدم نوعًا رائجًا من صنابير المياه. إذا كان الصنبور المتوفر مربعاً أو كبيراً جداً، أزل الحلقة الفاصلة قبل إدخال المحول في صنبور المياه.

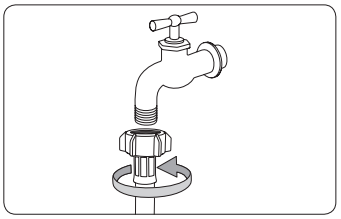

تحذير

أوقف استخدام الغسالة إذا وجدت تسرب مياه واتصل بمركز خدمة وصيانة Samsung المحلي. قد يؤدي عدم الالتزام بذلك إلى الصعق الكهربي.

تنبيه

لا تُطيل خرطوم الإمداد بالمياه بالقوة. إذا كان الخرطوم قصيراً للغاية، استعن بخرطوم أطول يتحمل الضغط العالي.

- بعد توصيل خرطوم توريد الماء بالمحول، تأكد من توصيله بشكل صحيح عن طريق سحب خرطوم توريد الماء لأسفل.
- استخدم نوعًا رائجًا من صنابير المياه. إذا كان الصنبور مربعاً أو كبيراً جداً، أزل الحلقة الفاصلة قبل إدخال الصنبور في المحول.

بالنسبة للطرازات المحددة المزودة بمدخل إضافي للإمداد بالمياه الساخن:

١. صل الطرف الأحمر من خرطوم الإمداد بالمياه الساخن بصمام الدخول الموجود بالجانب الخلفي من الغسالة.

٢. صل الطرف الآخر من خرطوم الإمداد بالمياه الساخن إلى صنبور المياه الساخن.

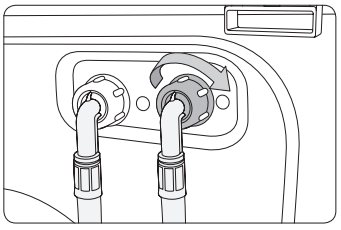

WW90H7410EW-03403S-03_AR.indd 16 2014/5/23 16:47:58

الخرطوم المائي (طرازات محددة فقط)

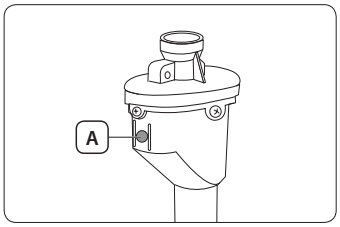

يُحذر الخرطوم المائي المستخدمين من مخاطر تسرب المياه عند وقوعها. فهو يستشعر تدفق المياه ويضئ **المؤشر (A)** الموجود بالمركز في باللون الأحمر في حالة وجود تسرب.

الخطوة ٥ - توصيل خرطوم الصرف

يمكن وضع خرطوم التصريف بثلاث طرق:

فوق حافة حوض الغسيل

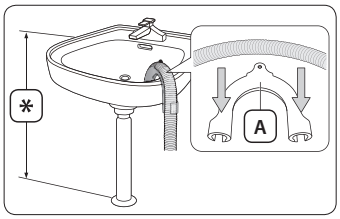

يتعين وضع خرطوم التصريف على ارتفاع بين ٦٠ سم و ٩٠ سم (*) من مستوى الأرضية. للإبقاء على انثناء خرطوم التصريف. استخدم **ماسك الخرطوم البلاستيكي (A)**. ثبت الماسك على الجدار بواسطة خطاف لضمان تصريف مستقر.

حول أنبوب تصريف الحوض

يتعين أن يكون أنبوب التصريف فوق سباكة الحوض بحيث يكون طرف الخرطوم على ارتفاع ٦٠ سم على الأقل عن مستوى الأرضية.

حول أنبوب التصريف

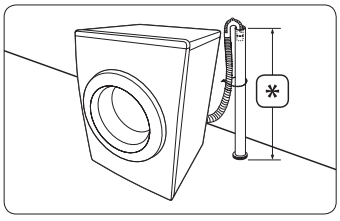

يجب أن يكون أنبوب التصريف بين ٦٠ سم و ٩٠ سم ارتفاع (*). يُنصح باستخدام أنبوب رأسي ذي ارتفاع يبلغ ٦٥ سم. تأكد أن أنبوب التصريف متصل بالأنبوب الرأسي بميل.

متطلبات الأنبوب الرأسي للتصريف:

- حد أدنى لقطر الدائرة ٥ سم.
- الحد الأدنى لسعة الجرف ٦٠ متر في الدقيقة.

الخطوة ٦ - شغل الغسالة

قم بتوصيل سلك الطاقة بمقبس حائط معتمد كمخرج تيار كهربائي بقدرة من ٢٢٠ فولط تيار متردد /٦٠ هرتز محمي بمنصهر أو قاطع دائرة. اضغط على زر **الطاقة** لتشغيل الغسالة.

WW90H7410EW-03403S-03_AR.indd 17 2014/5/23 16:47:59

ما قبل بدء التشغيل

الإعدادات الأولية

شغل وضع المعايرة (يُوصى بذلك)

تكتشف غسالة Samsung وزن الغسيل تلقائيًا. لاكتشاف الوزن بطريقة أفضل دقة، الرجاء تشغيل "وضع المعايرة" بعد التركيب. يتم تشغيل وضع المعايرة باتباع الخطوات أدناه.

١. قم بإزالة الغسيل أو أي محتويات في الغسالة وقم بإيقاف تشغيلها.

٢. اضغط على زر **الطاقة** ثم اتركه، ثم اضغط على زر .**Temp (درجة الحرارة)** وزر **Delay End (تأجيل التشغيل)** معًا. بعد ذلك، شغل الغسالة.

٣. اضغط على الزر **تشغيل/توقف** لتنشيط "وضع المعايرة".

٤. تدور الحاوية في اتجاه عقارب الساعة وضد عقارب الساعة لمدة ٣ دقائق.

٥. عند الانتهاء من ضبط "وضع المعايرة"، تظهر الرسالة " **END(En)**" ويتم إيقاف تشغيل الغسالة تلقائيًا. الغسالة جاهزة للاستخدام الآن.

WW90H7410EW-03403S-03_AR.indd 18 2014/5/23 16:47:59

دليل غسل الملابس

الخطوة ١ -الفرز

افرز الملابس وفق أي من المعايير التالية:

- **بطاقة العناية**: افرز الملابس إلى أقطان وألياف مخلوطة وأقمشة صناعية وملابس حريرية وأصواف ورايون.
- **اللون**: فم بفصل الملابس البيضاء عن الملابس الملونة.
- **الحجم**: إن الجمع بين أحجام مختلفة من الملابس معًا في أسطوانة الغسالة يُحسن أداء الغسيل.
- **رقة الملمس**: اغسل الملابس الرقيقة كل على حدة. باستخدام خيار Easy Iron (كوي سهل) وذلك في حالة الأغراض الصوفية والستائر والأغراض الحريرية. تحقق من الملصقات على الأغراض.

تأكد من التحقق من ملصقات كيفية العناية بالملابس وافرزها بناء على ذلك قبل بدء الغسيل.

الخطوة ٢ - إفراغ الجيوب

أفرغ كل جيوب الغسيل والملابس.

- إن الأغراض المعدنية مثل العملات المعدنية والدبابيس والإبزيم على الملابس. قد تتلف غيرها من الأغراض أو تتلف الأسطوانة نفسها.

اقلب الملابس المزينة بالأزرار والمطرزة على ظهرها.

- إذا تركت سحابات السراويل والجواكت مفتوحة أثناء الغسل، فإن هذا قد يسبب تلف سلة الأسطوانة. لذا يجب غلق السحابات وتثبيتها بخيط قبل الغسل.
- قد تتشابك الملابس ذات الخيوط والأشرطة الطويلة مع ملابس أخرى. احرص على تثبيت الخيوط قبل بدء الغسل.

الخطوة ٣ -استخدام شبكة الغسيل

- تأكد من وضع حمالات الصدر (التي يمكن غسلها في المياه) في شبكة غسيل. فالأجزاء المعدنية في حمالات الصدر قد تنكسر وتشف أغراض الغسيل الأخرى.
- قد تتعلق الملابس الصغيرة والخفيفة بالباب مثل الجوارب والقفازات والمنسوجات والمناديل. لذا قم بوضعهم داخل شبكة غسل جيدة.
- لا تغسل شبكة الغسيل وحدها دون وجود ملابس بها. فقد يؤدي ذلك إلى حدوث اهتزازات غير طبيعية في الغسالة قد تحركها وتسبب حدوث إصابات.

الخطوة ٤ -ما قبل الغسيل (في حالة الضرورة)

أضف خيار Prewash (ما قبل الغسيل) إلى الدورة المُحددة مع قدر من المنظف وذلك للأغراض والملابس القطنية شديدة الاتساخ.

WW90H7410EW-03403S-03_AR.indd 19 2014/5/23 16:47:59

الخطوة ٥ - تحديد سعة الوزن

لا تتجاوز الوزن المحدد للغسالة حيث يؤدي ذلك إلى نتائج غير مرضية بالنسبة للغسيل. انظر صفحة ٢٥ للوقوف على سعة الوزن وفق نوع الملابس.

عند غسل المفارش أو الألحفة، قد تطول مدة الغسل أو تقل فعالية عملية التجفيف. لذا فإن أقصى سرعة دورة تجفيف موصى بها في حالة المفارش أو الألحفة هي ٨٠٠ لفة في الدقيقة وتكون سعة الوزن ٢,٠ كجم أو أقل.

تنبيه: إذا لم يكن الغسيل موزع بتوازن داخل الغسالة وظهر كود الخطأ "UE"، أعد توزيع الحمل. إن الغسيل غير المتوازن داخل الغسالة قد يُقلل فاعلية أداء التجفيف.

الخطوة ٦ -وضع المنظف المناسب

يعتمد نوع مسحوق الغسيل على نوع القماش (القطن أو الألياف الصناعية أو الملابس الناعمة أو الصوف)، والألوان ودرجة حرارة المياه ودرجة الاتساخ. استخدم دوماً مسحوق الغسيل ذا "الرغوة القليلة" المصمَّم خصيصاً للغسالات الأوتوماتيكية.

- اتبع توصيات الشركة المصنعة لمسحوق الغسيل وفقًا لوزن الملابس ودرجة الاتساخ ودرجة عسر المياه في المنطقة. فإذا لم تكن متأكدًا من درجة عسر المياه، اتصل بالجهات المحلية المسئولة.
- لا تستخدم منظف يميل إلى التصلب أو السيولة. قد يظل المنظف بعد دروة الشطف ويسد مخرج الصرف.

تنبيه: استخدم فقط منظف سائل معتدل مع الصوف في دورة Wool (صوف). فاستخدام منظف مسحوق في دورة Wool (صوف) قد يبقى على الغسيل ويغير لونه.

WW90H7410EW-03403S-03_AR.indd 20 2014/5/23 16:47:59

إرشادات خاصة بدرج مسحوق الغسيل

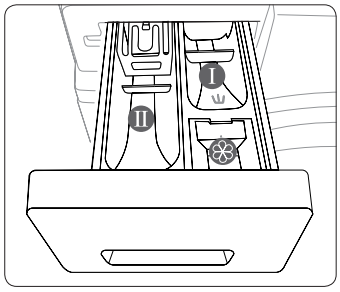

تحتوي الغسالة على وحدة توزيع ذات ثلاث حجيرات حيث تكون اليسرى مُخصصة للغسيل الرئيسي وتكون الوسطى لمنعمات الأقمشة واليمنى للغسيل التمهيدي.

Ⓘ	**حجيرة المادة المنظفة لما قبل الغسيل**
Ⓘ	**حجيرة منظف الغسيل الرئيسي:** منظفات على شكل مسحوق ومنعمات المياه ومنظفات ما قبل النقع والمبيض ومزيلات البقع
❀	**حجيرة منعم الأقمشة**

تنبيه

- لا تفتح درج المسحوق أثناء عمل الغسالة.
- لا تستخدم الأنواع التالية من المنظفات:
  - المنظفات على شكل ألواح أو أقراص
  - المنظفات على شكل كريات أو شبكات
- يتعين تخفيف المواد المركزة أو عالية التركيز (وكذلك منعمات الأقمشة أو المنظفات) بالمياه قبل الاستخدام لتفادي انسداد الحجيرة.

يوجد درج المنظفات في الزاوية اليسرى العلوية للغسالة.

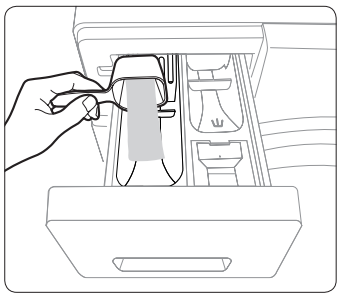

١. افتح درج المنظفات قليلاً.

٢. ضع كمية مناسبة من المنظف في الحجيرة اليسرى (Ⓘ).
انظر دليل استخدام المنظفات السائلة أدناه إذا أردت استخدام منظف سائل.

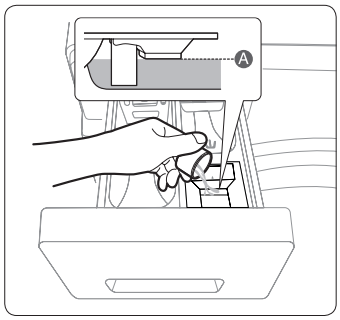

٣. ضع كمية مناسبة من منعم الأقمشة في الحجيرة الوسطى (❀) إذا كان ذلك ضروريًا.
لا تتجاوز علامة الحد الاقصى (A) الموجودة بالحجيرة.

WW90H7410EW-03403S-03_AR.indd 21 2014/5/23 16:48:00

٤. إذا اخترت خيار غسل أولي، ضع قدر مناسب من المنظف في الحجيرة اليمنى (Ⅰ).

٥. ادفع بدرج المسحوق للداخل لغلقه.

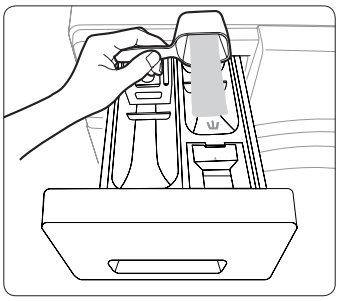

حاوية المنظف السائل (طرازات محددة فقط)

لاستخدام المنظف السائل، ضع أولاً **حاوية المنظف السائل (A)** في حجيرة الغسيل الرئيسي (Ⅱ). ثم ضع كمية مناسبة من المنظف في الحاوية. لا تتجاوز علامة الحد الاقصى الموجودة بالحجيرة.

تنبيه: أزل حاوية المنظف السائل إذا كنت ستستخدم مسحوق منظف.

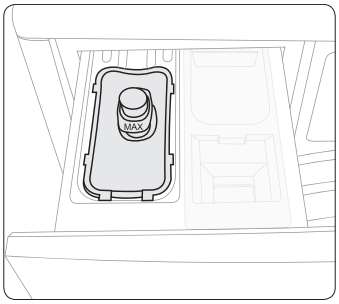

WW90H7410EW-03403S-03_AR.indd 22 2014/5/23 16:48:00

العمليات

لوحة التحكم

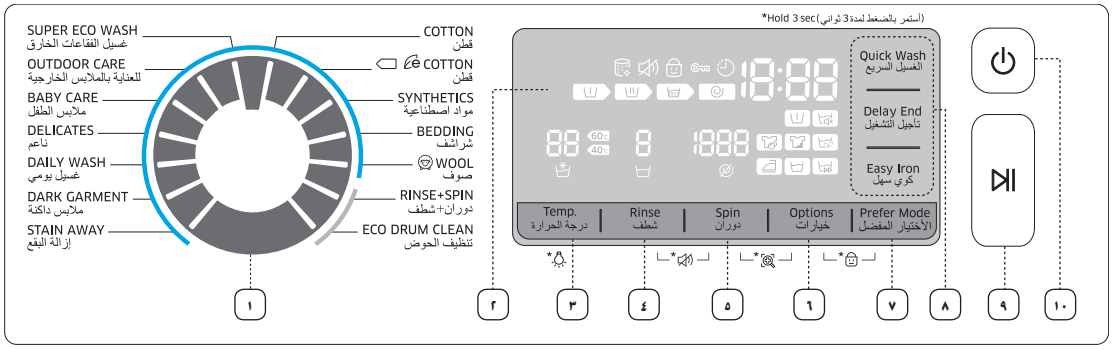

١	مُحدد الدورة	أدر القرص لاختيار دورة.
٢	منطقة العرض	تعرض المعلومات الخاصة بوقت الغسيل المتبقي والإعدادات.
٣	Temp. (درجة الحرارة)	اضغط هنا لتغيير درجة حرارة المياه بالنسبة للدورة الحالية. اضغط واستمر بالضغط لمدة ٣ ثوان لتشغيل/ إيقاف تشغيل ضوء الأسطوانة.
٤	Rinse (شطف)	اضغط هنا لتغيير عدد مرات الشطف بالنسبة للدورة الحالية. يُمكن الشطف حتى ٥ مرات.
٥	Spin (دوران)	اضغط هنا لتغيير عدد مرات الدوران بالنسبة للدورة الحالية. • **Rinse Hold (انتظار الشطف)**: يجري تعليق عملية الشطف بحيث يظل الغسيل في المياه. لإخراج الغسيل، صرف المياه أو شغل دورة دوران. • **No Spin (بدون دوران)**: لا تجفف الأسطوانة الملابس بعد دورة التصريف النهائي.
٦	Options (خيارات)	اضغط هنا لانتقاء أحد الخيارات. بالضغط على هذا الزر، يتغير الخيار المُحدد بحسب التتابع التالي: نقع > مكثف + غسيل أولي > نقع + مكثف > نقع + غسيل أولي > مكثف + غسيل أولي > نقع + مكثف + غسيل أولي > إيقاف تشغيل
٧	Prefer Mode (الأختيار المفضل)	اضغط هنا للدخول في شاشة خيارات المستخدم. توجد ثلاثة خيارات للمستخدم لكن لا يوجد إمكانية للاختيار المتعدد.
٨	الخيارات المتكررة	يجري توفير ثلاثة اختيارات منفصلة للوصول السهل إليها. للاختيار أو إلغاء الاختيار، اضغط على الزر المناسب.
٩	تشغيل/توقف	اضغط لبدء التشغيل أو إيقافه.
١٠	الطاقة	اضغط لتشغيل / إيقاف تشغيل الغسالة.

WW90H7410EW-03403S-03_AR.indd 23 2014/5/23 16:48:01

خطوات يسيرة وسهلة للبدء.

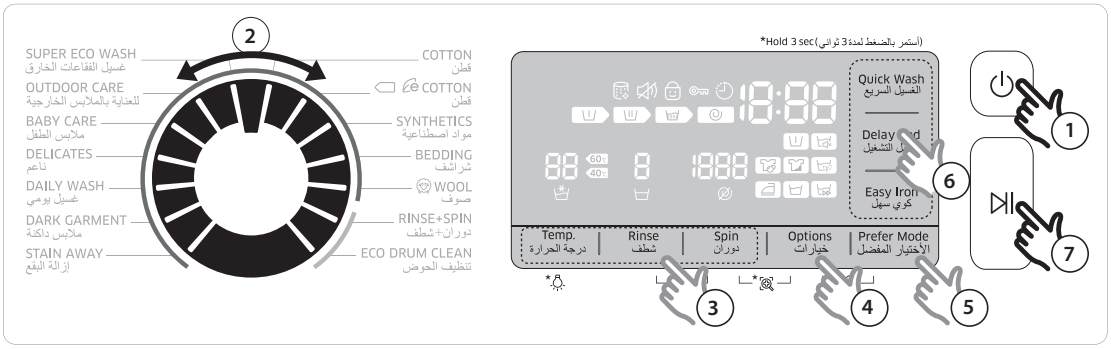

١. اضغط على زر **الطاقة** لتشغيل الغسالة.

٢. أدر مُحدد الدورة لاختيار دورة.

٣. غير إعدادات الدورة (**درجة الحرارة, و شطف, و دوران**) وفق ما تقتضي الضرورة.

٤. لإضافة خيار ما، اضغط على زر **Options** (**خيارات**) بشكل متكرر حتى تضئ أيقونة (أيقونات) الخيار المطلوبة.

٥. لتحديد الاختيار المفضل، اضغط على زر **Prefer Mode** (**الأختيار المفضل**) بشكل متكرر حتى تضيء الأيقونة المناسبة.

٦. لإضافة خيار متكرر، اضغط على الزر المناسب (**Quick wash** (**الغسيل السريع**)و **Delay End** (**تأجيل التشغيل**) و**Easy Iron** (**كوي سهل**)).

٧. اضغط على الزر **تشغيل/توقف**.

لتغيير الدورة خلال التشغيل، اتبع الآتي:

١. اضغط على زر **تشغيل/توقف** لإيقاف التشغيل.

٢. اختر دورة مختلفة.

٣. اضغط على زر **تشغيل/توقف** لبدء الدورة الجديدة.

WW90H7410EW-03403S-03_AR.indd 24 2014/5/23 16:48:01

رؤية عامة للدورة

الدورات القياسية

الدورة	الوصف وأقصى وزن (كجم)	
COTTON (قطن)	• للملابس القطنية أو أغطية السرير أو مفارش المائدة أو الملابس الداخلية والمناشف أو القمصان. • يجري ضبط وتعديل وقت الغسيل وعدد مرات الشطف أوتوماتيكيًا وفق الوزن.	الحد الأقصى
COTTON (قطن)	• يُحقق وضع الطاقة المنخفضة الأداء المثالي لأقمشة القطن وأغطية السرير ومفارش المائدة والملابس الداخلية والمناشف والقمصان	الحد الأقصى
SYNTHETICS (مواد اصطناعية)	• للبلوزات أو القمصان متوسطة أو خفيفة الاتساخ وغيرها من الملابس المصنوعة من البوليستر (الديولين والتريفيرا) ومادة البوليامايد (البيرلون والنيلون) أو ما يُماثل ذلك من الأنسجة.	٣,٥
BEDDING (شراشف)	• لأغطية السرير وملاءات وأغطية الفراش. وما إلى ذلك. • لتحقيق أفضل النتائج. اغسل نوع واحد من المفروشات وتأكد أن الوزن أقل من ٢ كيلو جرام.	٢
WOOL (صوف)	• خاص بالصوف القابلة للغسيل في الغسالة لأوزان أقل من ٢ كجم. • تعتمد دورة الصوف على الاهتزاز والنقع الهادئ وذلك لحماية أنسجة الصوف من الانكماش/ التلف. • يوصى باستخدام منظف معتدل.	٢
SUPER ECO WASH (غسيل الفقاعات الخارق)	• يساهم وضع Eco Bubble (غسيل الفقاعات) ذو درجة الحرارة المنخفضة في الحفاظ على الطاقة.	٤
OUTDOOR CARE (للعناية بالملابس الخارجية)	• لملابس التسلق والتزلج والملابس الرياضية المصنوعة من خامات خاصة مثل الألياف اللدنة والقماش القابل للتمدد والألياف الدقيقة.	٢
BABY CARE (ملابس الطفل)	• يعتمد على الغسيل في درجات حرارة عالية وشطف إضافي لضمان عدم بقاء أي منظف مسحوق على الملابس.	٤
DELICATES (ناعم)	• للأقمشة الشفافة وحمالات الصدر. والملابس النسائية التحتية. (الملابس الحريرية) وغيرها من الأقمشة التي تغسل يدوياً فقط.	٢
DAILY WASH (غسيل يومي)	• إتمام سريع لعملية الغسيل خلال ساعة تقريبًا للأغراض اليومية مثل الملابس الداخلية والقمصان.	٤
DARK GARMENT (ملابس داكنة)	• يعتمد على الشطف الإضافي وتقليل التجفيف لضمان غسل ملابسك الداكنة المفضلة بلطف وشطفها جيدًا.	٤
STAIN AWAY (إزالة البقع)	• تعتمد على النقع بفعاليته في إزالة البقع من الغسيل. تتوقف الحاوية عن الدوران خلال دورة النقع. ولا يُمثل ذلك عطل بالنظام.	٤
RINSE+SPIN (دوران+شطف)	• يعتمد على الشطف الإضافي بعد وضع منعم الأقمشة على الغسيل.	-
ECO DRUM CLEAN (تنظيف الحوض)	• خاص بتنظيف الأسطوانة وتزيل الأوساخ والبكتريا من الأسطوانة. • يجري تنفيذ ذلك كل ٤٠ غسلة بدون وضع منظف أو مبيض. • تأكد من خلو الأسطوانة. • لا تستخدم أي مواد منظفة لتنظيف الأسطوانة.	-

WW90H7410EW-03403S-03_AR.indd 25 2014/5/23 16:48:01

خيارات

	الخيار	الوصف
	غسل أولي	• يضيف هذا الخيار دورة غسيل أولية قبل دورة الغسيل الأساسية.
	مكثف	• للغسيل شديد الاتساخ. ويكون مدة تشغيل كل دورة أطول من المعتاد.
	نقع	• يزيل هذا الخيار البقع بفاعلية بنقع الغسيل. • في كل دورة نقع. تدور الأسطوانة لمدة دقيقة ثم تظل ساكنة لمدة ٤ دقائق بإجمالي ٦ دقائق لكل ٣٠ دقيقة.
-	Quick Wash (الغسيل السريع)	• خاص بالملابس الأقل اتساخًا بوزن أقل من ٢ كيلو جرام. • يستغرق الأمر نحو ١٥ دقيقة بناء على ظروف مثل ضغط المياه وعسر المياه و/ أو خيارات إضافية جرى تحديدها. • يزيد وقت Quick Wash (الغسيل السريع) هذا التتابع: off (إيقاف التشغيل) > ١٥ دقيقة> ٢٠ دقيقة> ٣٠ دقيقة> ٤٠ دقيقة> ٥٠ دقيقة> ٦٠ دقيقة. • يوصى باستخدام كمية مسحوق أقل من ٢٠ جرام (لكل ٢ كيلو جرام من الوزن).
	Delay End (تأجيل التشغيل)	• يُشير الوقت المعروض إلى وقت نهاية الدورة المُحددة. • يُمكنك ضبط وقت تأجيل التشغيل بوحدات ساعة أكثر من الوقت المقدر للدورة الحالية. • اضبط Delay End (تأجيل التشغيل) بين ١ ساعة و١٩ ساعة.
	كوي سهل	• تُزيد سرعة التجفيف من تقليل تجعيد الغسيل. • اضبط سرعة التجفيف حتى ٨٠٠ لفة في الدقيقة.

Prefer Mode (الاختيار المفضل)

	الوضع	الوصف
	سرعة الغسيل	• يختص ذلك بتغيير إعدادات الدورة لتقليل الوقت الكلي للغسيل. • ينصح بذلك في حالة وزن غسيل اقل من ٤ كيلو جرام من في دورة COTTON (قطن) مع تمكين سرعة الغسيل.
	غسل صديق البيئة	• يختص ذلك بتغيير إعدادات الدورة لتحقيق اقتصاد وتوفير في الطاقة الكلية المستهلكة.
	الغسيل الصامت	• يختص ذلك بتغيير إعدادات الدورة لتقليل ضوضاء الغسيل واهتزازته.

WW90H7410EW-03403S-03_AR.indd 26 2014/5/23 16:48:02

Delay End (تأجيل التوقف)

يُمكنك ضبط الغسالة بحيث تُنهي البرنامج الحالي في وقت مُحدد لاحقًا.

وهذه الخاصية مُفيدة للغاية إذا كنت تود إتمام الغسيل في موعد عودتك للمنزل من العمل.

١. اختر دورة مختلفة. ثم غير إعدادات الدورة إذا اقتضت الضرورة.
٢. اضغط على زر **Delay End (تأجيل التوقف)** بشكل متكرر ليتم ضبط مدة تأجيل التوقف.
٣. اضغط على الزر **تشغيل/توقف**.

مثال

لنفرض أنك ترغب في إنتهاء برنامج بعد ثلاث ساعات من الآن مع أن مدته أساسًا ساعتين. لتحقيق ذلك أضف خاصية تأجيل التشغيل إلى البرنامج الحالي مع ضبطه على ٣ ساعات واضغط على زر **تشغيل/توقف** عند الساعة ٠٢:٠٠ مساء. ماذا يحدث بعد ذلك؟ تبدأ الغسالة العمل عند الساعة ٠٣:٠٠ مساء وتنتهي عند الساعة ٠٥:٠٠ مساء. ويعرض ما يلي الخط الزمني لهذه الحالة.

WW90H7410EW-03403S-03_AR.indd 27 2014/5/23 16:48:02

قفل الأطفال

للوقاية من الحوادث الناجمة عن عبث الأطفال أو الصغار، يغلق قفل الأطفال كل الأزرار.

- لضبط أو إلغاء قفل الأطفال اضغط على أزرار **Options (خيارات)** و **Prefer Mode (الاختيار المفضل)** واستمر بالضغط عليهما لمدة ٣ ثوان.

لإضافة منظف أو مزيدًا من الغسيل إلى الأسطوانة أو لتغيير إعدادات الدورة في حالة قفل الأطفال، يتعين أولاً إلغاء قفل الأطفال.

الصوت

كتم الصوت أو عدم كتم الصوت.

- لضبط كتم الصوت أو عدم كتم الصوت اضغط على أزرار **Rinse (شطف)** و **Spin (دوران)** واستمر بالضغط عليهما لمدة ٣ ثوان.

ضوء الأسطوانة

- لإضاءة ضوء الأسطوانة إو إيقاف الإضاءة اضغط على زر .**Temp (درجة الحرارة)** واستمر بالضغط عليه لمدة ٣ ثوان.
- ينطفئ ضوء ضوء الأسطوانة أوتوماتيكيًا بعد ٥ دقائق.

WW90H7410EW-03403S-03_AR.indd 28 2014/5/23 16:48:02

الصيانة

حافظ على الغسالة نظيفة حتى لا ينخفض مستوى الأداء والحفاظ على عمرها الافتراضي.

ECO DRUM CLEAN (تنظيف الحوض)

نفذ هذه الدورة بشكل منتظم لتنظيف الأسطوانة والتخلص من البكتريا.

١. اضغط على زر **الطاقة** لتشغيل الغسالة.

٢. أدر **مُحدد الدورة** لاختيار **Eco Drum Clean (تنظيف الحوض)**.

٣. اضغط على الزر **تشغيل/توقف**.

إن درجة حرارة المياه في Eco Drum Clean (تنظيف الحوض) مُحدد على ٧٠ درجة سلزيوس ولا يُمكن تغييره.

تنبيه: لا تستخدم أي مواد منظفة لتنظيف الأسطوانة. إن المواد الكيمائية المترسبة والمتبقية بالأسطوانة تؤثر على أداء الغسيل سلبًا.

منبه التذكير Eco Drum Clean (تنظيف الحوض)

يظهر منبه التذكير Eco Drum Clean (تنظيف الحوض) على الشاشة الرئيسية كل ٤٠ مرة غسيل.

نفذ دورة Eco Drum Clean (تنظيف الحوض) ينصح بتنفيذ Eco Drum Clean (تنظيف الحوض) بانتظام.

عندما ترى هذا التذكير. يُمكنك تجاهل هذا التذكير ٦ مرات متتابعة. ولا يظهر هذا التذكير بدءًا من الغسلة السابعة. ومع ذلك فإن التذكير يظهر مرة ثانية عند الغسلة الأربعين التالية.

WW90H7410EW-03403S-03_AR.indd 29 2014/5/23 16:48:02

SMART CHECK (الاختيار الذكي)

لتمكين هذه الخاصية، يتعين بداية تنزيل تطبيق "**Samsung Smart Washer**" من Google Play أو App Store وثبته على جهاز الموبايل ذي خاصية الكاميرا.

ولقد جرى ضبط Smart Check (الفحص الذكي) خاصة:

سلسلة Galaxy & iPhone (جالاكسي وأيفون) (لا يُمكن دعم بعض الموديلات)

١. اضغط على الزرين **Spin (دوران)** و **Options (خيارات)** واستمر بالضغط مدة ٣ ثواني عليهم معًا للدخول في وضع الفحص الذكي.
٢. تبدأ الغسالة إجراء التشخيص الذاتي وتعرض أكواد الأعطال إذا وجد أي أعطال.
٣. شغل تطبيق **Samsung Smart Washer** على جهاز الموبايل الخاص واضغط على **Smart Check (الفحص الذكي)**.
٤. اضبط جهاز الموبايل في مواجهة لوحة شاشة عرض الغسالة بحيث يقابل الموبايل والغسالة بعضهما. وهنا يتعرف التطبيق أوتوماتيكيًا على كود الخطأ.
٥. عندما يجري التعرف على كود الخطأ بشكل صحيح، يوفر التطبيق معلومات مفصلة حول الخطأ مع الخطوات التالية.

- قد يختلف اسم Smart Check (الفحص الذكي) بناء اللغة.
- إذا كانت الغسالة تعكس الضوء على الشاشة، فإن التطبيق قد يخفق في التعرف على الخطأ.
- إذا أخفق التطبيق في التعرف على كود Smart Check (الفحص الذكي)، أدخل الكود يدويًا إلى شاشة التطبيق.

WW90H7410EW-03403S-03_AR.indd 30 2014/5/23 16:48:02

لتصريف عند الطوارئ

في حالة انقطاع الكهرباء، صرف المياه الموجود في الأسطوانة قبل إخراج الغسيل.

١. انزع كابل كهرباء الغسالة من المقبس الرئيسي.

٢. اضغط على الجزء العلوي من غطاء المصفاة لينفتح.

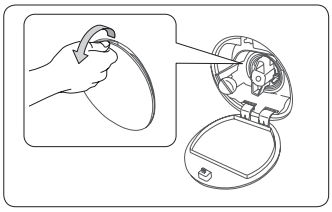

٣. ثم اجذب أنبوب تصريف الطوارئ برفق.

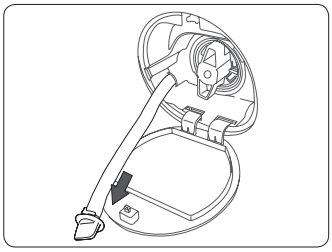

٤. أمسك طرف أنبوب التصريف وافتح غطاء الأنبوب مع الإمساك بالطرف.

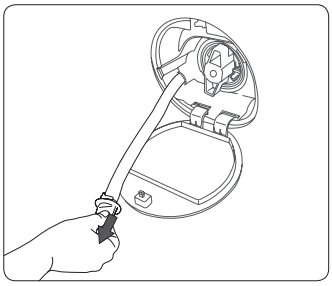

٥. أفرغ المياه في حاوية.

٦. أغلق غطاء الأنبوب ثم أعد إدخال أنبوب التصريف.

٧. أغلق غطاء المصفاة في مكانه

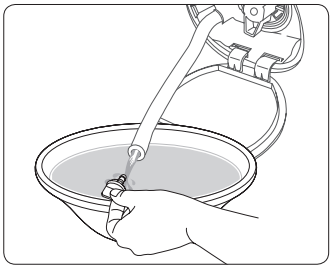

WW90H7410EW-03403S-03_AR.indd 31 2014/5/23 16:48:03

سطح الغسالة

استخدم قطعة قماش عليها منظف منزلي لا يحتوي على مواد آكلة. لا تضع المياه على الغسالة.

المصفاة الشبكية

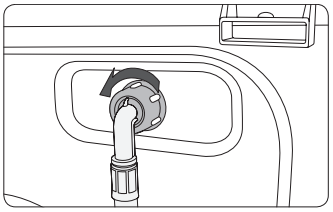

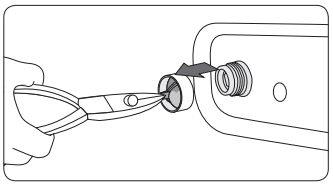

نظف المصفاة الشبكية للإمداد بالمياه مرة كل عامين.

١. أوقف تشغيل الغسالة وافصل كابل الكهرباء.
٢. أغلق صنبور المياه
٣. حرر الخرطوم وفكه من الجانب الخلفي من الغسالة. غط الخرطوم بقطعة قماش للحيلولة دون خروج المياه منه.
٤. استخدم زَرَدِيّة لسحب المصفاة الشبكية من فتحة صمام الدخول.
٥. انقع المصفاة الشبكية في المياه بعمق بحيث يجري نقع الموصل ذي السنون.
٦. جفف المصفاة الشبكية بالكامل في الظل.
٧. أعد إدخال المصفاة الشبكية في خرطوم الإمداد بالمياه وضع خرطوم الإمداد بالمياه في موضعه الأصلي.
٨. افتح صنبور المياه

إذا كانت المصفاة الشبكية بها انسداد، يظهر الخطأ "4E"على الشاشة.

WW90H7410EW-03403S-03_AR.indd 32 2014/5/23 16:48:03

مصفاة المخلفات

يُنصح بتنظيف مصفاة المخلفات ٥ أو ٦ مرات سنويًا لمنع انسداده. إن مصفاة المخلفات المسدودة قل تقليل تأثير الفقاعات.

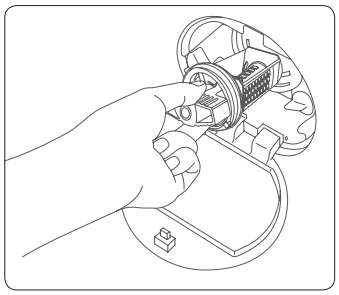

١. أوقف تشغيل الغسالة وافصل كابل الكهرباء.

٢. صرف المياه المتبقية داخل الأسطوانة متبعًا الإجراءات الواردة في **تصريف عند الطوارئ** بصفحة ٣١.

٣. افتح غطاء المصفاة باستخدام عملة معدنية أو مفتاح.

٤. أدر غطاء مصفاة المخلفات إلى اليسار وصرف المياه المتبقية.

٥. نظف مصفاة المخلفات.

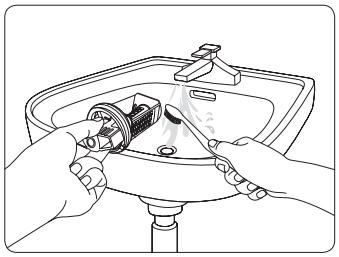

٦. نظف مصفاة المخلفات باستخدام فرشاة ناعمة. تأكد أن مروحة مضخة التصريف الموجودة خلف مصفاة المخلفات غير مسدودة.

٧. أعد تركيب مصفاة المخلفات وأدر غطاء المرشح تجاه اليمين.

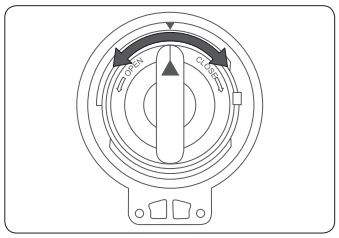

- لفتح غطاء أمان المصفاة، اضغط عليه للداخل وأدره عكس اتجاه عقارب الساعة. يُساعد زنبرك الغطاء على فتح الغطاء.
- لغلق غطاء أمان المصفاة، أدره في اتجاه عقارب الساعة. يصدر الزنبرك صوتًا خلال ذلك وهذا أمر طبيعي.
- إذا كانت مصفاة المخلفات بها انسداد، يظهر الخطأ "5E" على الشاشة.

تنبيه

- تأكد من إغلاق غطاء المصفاة بعد تنظيف المصفاة. قد يؤدي عدم الالتزام بذلك إلى حدوث تسرب.
- تأكد من إغلاق وضع المصفاة بشكل صحيح بعد تنظيف المصفاة. قد يؤدي عدم الالتزام بذلك إلى خلل بالتشغيل أو حدوث تسرب.

WW90H7410EW-03403S-03_AR.indd 33 2014/5/23 16:48:03

درج مسحوق الغسيل

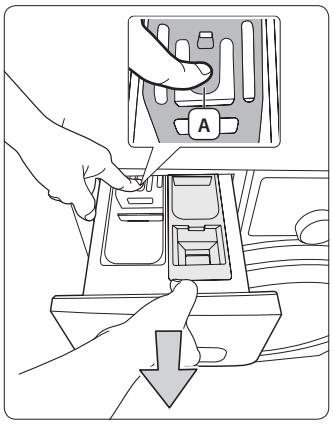

١. مسكًا لأسفل **بذراع التحرير (A)** على الجانب الداخلي من الدرج. افتح الدرج قليلاً.
٢. أزل **ذراع التحرير** وحجيرة المنظف السائل (اختياري) من الدرج.

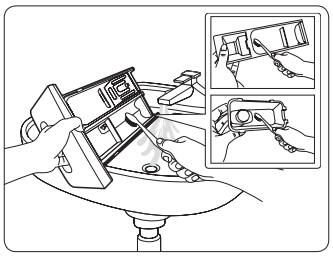

٣. نظف مكونات الدرج في ماء جاري باستخدام فرشاة ناعمة.

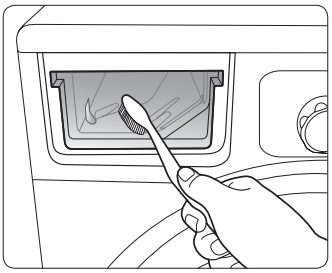

٤. نظف تجويف الدرج في ماء جاري باستخدام فرشاة ناعمة.
٥. أعد تركيب **ذراع التحرير (A)** وحجيرة المنظف السائل (اختياري) من الدرج.
٦. ادفع بدرج المسحوق للداخل لغلقه.

لإزالة الجزء المتبقي من المنظف، نفذ الدورة Spin + Rinse (شطف + دوران) بينما تكون الأسطوانة خالية.

WW90H7410EW-03403S-03_AR.indd 34 2014/5/23 16:48:03

إصلاح حالة التجمد

قد تتجمد الغسالة إذا انخفضت درجة الحرارة دون ٠ سلزيوس.

١. أوقف تشغيل الغسالة وافصل كابل الكهرباء.

٢. صب المياه الدافئ على صنبور المياه لإرخاء خرطوم توريد المياه.

٣. أزل خرطوم توريد المياه وانقعه في المياه الدافئ.

٤. صب المياه الدافئ في أسطوانة الغسالة واتركه لمدة ١٠ دقائق.

٥. أعد وصل خرطوم الإمداد بالمياه إلى صنبور المياه.

إذا لم تعمل الغسالة بشكل طبيعي، كرر الخطوات أعلاه حتى تعمل الغسالة بشكل طبيعي.

يجب الحذر رجاء بشأن الفترات الزمنية من سوء الاستخدام.

تجنب ترك الغسالة لفترات طويلة دون الاستخدام.

يتعين تصريف المياه من الغسالة وافصل كابل الطاقة في هذه الحالة.

١. أدر مُحدد الدورة لاختيار **RINSE+SPIN (دوران+شطف)**.

٢. أفرغ الأسطوانة واضغط على زر **تشغيل/توقف**.

٣. أغلق صنبور الماء وافصل خرطوم الإمداد بالماء عند إتمام الدورة.

٤. أوقف تشغيل الغسالة وافصل كابل الكهرباء.

٥. افتح الباب ودع الهواء يمر خلال الأسطوانة.

WW90H7410EW-03403S-03_AR.indd 35 2014/5/23 16:48:03

استكشاف الأخطاء وإصلاحها

نقاط التحقق والفحص

إذا واجهت مشكلة بالغسالة، تحقق من الجدول التالي وجرب ما به من اقتراحات.

المشكلة	الحل
لن تعمل	• تأكد من توصيل قابس الغسالة بمصدر التيار الكهربائي. • تأكد من إغلاق الباب بإحكام. • تأكد من فتح مصدر صنابير الماء. • تأكد من الضغط على الزر تشغيل/توقف.
عدم وجود ماء أو عدم وجود ماء كافٍ	• افتح الصنبور تماماً. • تأكد من أن خرطوم توريد الماء غير متجمد. • فك ثنيات خراطيم توريد الماء. • نظف المصفاة الموجودة على الخرطوم الخاص بمدخل الماء.
هل يوجد مسحوق غسيل في الدرج بعد اكتمال دورة الغسيل	• تأكد من تشغيل الغسالة بضغط ماء كاف. • تأكد من إضافة مسحوق الغسيل في منتصف درج المسحوق.
تهتز الغسالة أو تحدث صوتاً مرتفعاً	• تأكد من تركيب الغسالة على سطح مستو. إذا كانت الأرض غير مستوية، اضبط قدم الغسالة حتى تستوي على الأرضية. • تأكد من إزالة مسامير الشحن. • تأكد من عدم ملامسة الغسالة لأي شيء آخر. • تأكد من توزيع وزن الملابس الموجودة في الغسالة.
لا يتم تصريف الماء من الغسالة و/أو لا تقم بعملية التنشيف	• فك الثنيات الموجودة في خرطوم التصريف. قلل من استخدام الخراطيم الملتوية. • تأكد من أن المصفاة الشبكية المتصلة بخرطوم الماء غير مسدودة.
الباب مغلق ولا يمكن فتحه	• لا يمكن فتح الباب حتى تمر ٣ دقائق على توقف الجهاز عن العمل أو فصل التيار الكهربي.

في حالة استمرار المشكلة، اتصل بمركز خدمة عملاء Samsung المحلي.

WW90H7410EW-03403S-03_AR.indd 36 2014/5/23 16:48:03

رموز المعلومات

في حالة تعرض الغسالة للعطل، قد يظهر أحد رموز المعلومات على لوحة العرض. تحقق من الجدول التالي وجرب ما به من اقتراحات

رمز الكود	الحل
dE	• تأكد من إغلاق الباب بإحكام. • تأكد من أن الملابس غير عالقة بالباب.
4E	• تأكد أن صنبور توريد الماء مفتوح. • تأكد من ضغط الماء. • قم بتنظيف المصفاة الشبكية المتصلة بخرطوم الماء.
5E	• نظف مصفاة المخلفات. • تأكد من تركيب خرطوم تصريف الماء بطريقة صحيحة. • قم بتنظيف المصفاة الشبكية المتصلة بخرطوم الماء.
UE	• وزن الملابس غير موزّع. قم بإعادة توزيع الملابس. وفي حالة غسيل قطعة واحدة من الملابس، مثل برنس حمام أو جينز، قد لا تكون نتيجة التنشيف النهائي مرضية، وتظهر رسالة خطأ "UE" في إطار العرض.
cE/3E	• اتصل بخدمة ما بعد البيع.
Sd/Sud	• تحدث هذه الحالة عند استشعار كمية كبيرة من الرغوة. ويتم كذلك عرضها عند التخلص من الرغوة. عند الانتهاء من عملية الإزالة، تتم متابعة الدورة الطبيعية (وبعد ذلك إحدى العمليات الطبيعية. هذا الخطأ يهدف إلى الحماية ضد العيوب غير القابلة للكشف عنها.)
Uc	• إذا كانت فلطية الطاقة المزودة غير مستقرة، فقد تتوقف الغسالة عن العمل مؤقتاً لحماية أجهزتها الكهربائية. • إذا كان يتم إمداد الفلطية الصحيحة للغسالة، فستعاود الدورة العمل أوتوماتيكياً.

إذا وجدت أن أحد الأكواد يستمر بالظهور على الشاشة، اتصل بمركز خدمة Samsung المحلي.

WW90H7410EW-03403S-03_AR.indd 37 2014/5/23 16:48:03

المواصفات

حماية البيئة

- هذا الجهاز مصنوع من مواد قابلة لإعادة التدوير. إذا قررت التخلص من هذا الجهاز، يرجى مراعاة القوانين المحلية الخاصة بالتخلص من النفايات.
  اقطع سلك التيار بحيث لا يمكن توصيل الجهاز بمصدر طاقة. قم بإزالة الباب لمنع تعرض الحيوانات أو الأطفال الصغار للاحتباس داخل الجهاز.
- لا تضع مسحوق غسيل أكثر من الكمية المبينة في إرشادات الشركة المصنعة لمسحوق الغسيل.
- استخدم مواد إزالة البقع ومواد التبييض قبل دورة الغسيل عند الحاجة فقط.
- وفر الماء والكهرباء من خلال إجراء الغسيل بأوزان كاملة (تختلف الكمية وفقاً للبرنامج المستخدم).

بيان التوافق

يتوافق هذا الجهاز مع مقاييس السلامة الأوروبية EC directive 93/68 و EN Standard 60335.

WW90H7410EW-03403S-03_AR.indd 38 2014/5/23 16:48:03

جدول العناية بالأقمشة

توضح الرموز التالية تعليمات العناية بالملابس. تتضمن بطاقات العناية أربعة رموز على النحو التالي: غسيل وتبييض وتجفيف وكي (وتنظيف جاف إذا لزم الأمر). يضمن استخدام هذه الرموز التناسق بين الشركات المصنعة للملابس المحلية والمستوردة. اتبع تعليمات بطاقة العناية لزيادة عمر الملابس وتقليل مشاكل الغسيل.

	مواد مقاومة		يمكن الكي عند ١٠٠°م بحد أقصى
	ملابس رقيقة		يحظر الكي
95 95	يمكن الغسل عند ٩٥°م	Ⓐ	يمكن استخدام التنظيف الجاف باستخدام أي مواد مذيبة
60 60	يمكن الغسل عند ٦٠°م	Ⓟ	التنظيف الجاف بالبروكلوريد أو الوقود المخفف أو الكحول النقي أو R١١٣ فقط
40 40	يمكن الغسل عند ٤٠°م	Ⓕ	التنظيف الجاف بوقود الطائرات أو الكحول النقي أو R١١٣ فقط
30 30	يمكن الغسل عند ٣٠°م		يحظر استخدام التنظيف الجاف
	مكن غسلها باليد		تجفف وهي مفرودة
	تنظيف جاف فقط		يمكن نشرها لتجف
Cl	يمكن استخدام مادة تبييض مع الماء البارد		تجفيف الملابس وهي معلقة على حمالة
	يحظر استخدام مادة تبييض		تجفيف بالتدوير، حرارة عادية
	يمكن الكي عند ٢٠٠°م بحد أقصى		تجفيف بالتدوير، حرارة خفيفة
	يمكن الكي عند ١٥٠°م بحد أقصى		يحظر تجفيفها بالتدوير

WW90H7410EW-03403S-03_AR.indd 39 2014/5/23 16:48:05

المواصفات

النوع			غسالة أمامية التحميل
الأبعاد			WW90H7410E*
			العرض ٦٠٠ م x العمق ٦٠٠ م x الارتفاع ٨٥٠ م
ضغط الماء			٥٠ كيلوباسكال ~ ٨٠٠ كيلوباسكال
كمية الماء			٥٤ لتر
الوزن الصافي			WW90H7410E*
			٧٣ كجم
سعة الغسيل والتنشيف			٩,٠ كجم
استهلاك الطاقة	الطراز		WW90H7410E*
	الغسل	٢٢٠ فولت	٦٠ وات
		٢٤٠ فولت	٦٠ وات
	الغسل والتسخين	٢٢٠ فولت	٢٠٠٠ وات
		٢٤٠ فولت	٢٤٠٠ وات
	التنشيف: الطراز	WF1704	WW90H7410E*
	التنشيف: ٢٣٠ فولت	٥٨٠ وات	٦٠٠ وات
	الضخ		٣٤ وات
دورات التنشيف	الطراز	WF1704	WW90H7410E*
	دورة في الدقيقة	١٤٠٠	١٤٠٠

قد يتعرض شكل المنتج ومواصفاته للتغيير دون إخطار مسبق لأغراض تحسين المنتج.

جرى تحديد المواصفات الواردة على ملصق الطاقة باستخدام البرنامج التالي وفق UAE.S 5010 2:2013.

- البرنامج هو Cotton (قطن) ٦٠ مئوية +intensive (مكثف)+ Eco Bubble (غسيل الفقاعات)

WW90H7410EW-03403S-03_AR.indd 40 2014/5/23 16:48:05

صفحة الغسالات المنزلية

إن التصميم والمواصفات عرضة للتغيير دون إشعار وذلك بهدف تحقيق جودة أفضل.

طبقاً لقانون (الاتحاد الأوروبي) رقم 2010/1061

Samsung			
اسم الموديل			WW90H7410E*
السعة	كجم		٩
كفاءة الطاقة			
A***(أعلى كفاءة) إلى D (أدنى كفاءة)			A***
استهلاك الطاقة			
استهلاك الطاقة السنوي (AE_C) [١]	كيلووات في الساعة/ السنة		١٥١
استهلاك الطاقة (E_t١٠) برنامج الملابس القطنية ٦٠ مئوية عند الحمولة الكاملة	كيلووات في الساعة		٠,٧٧
استهلاك الطاقة (E_t٢/١٠,١) برنامج الملابس القطنية ٦٠ مئوية مع حمولة جزئية	كيلووات في الساعة		٠,٦٧
استهلاك الطاقة (E_t٢/٤٠,١) برنامج الملابس القطنية ٤٠ مئوية مع حمولة جزئية	كيلووات في الساعة		٠,٥١
نمط إيقاف الطاقة الموزون (P_o)	وات		٠,٤٥
الطاقة الموزونة في نمط التشغيل-الأيسر (P_l)	وات		١٠
استهلاك الماء السنوي (AW_c) [٢]	لتر/ سنة		٩٤٠٠
فئة كفاءة الدوران [٣]			
A (أعلى كفاءة) إلى G (أدنى كفاءة)			A
أقصى سرعة دوران	دورة في الدقيقة		١٤٠٠
الرطوبة المتبقية	٪		٤٤
البرامج التي يوجد معلومات على الملصق والصفحة ذات الصلة			ملابس قطنية ٦٠ مئوية، وملابس قطنية ٤٠ مئوية [٤]
مدة البرنامج الخاصة بالبرنامج القياسي			
ملابس قطنية ٦٠ مئوية عند الحمولة الكاملة	دقيقة		٢٧٠
ملابس قطنية ٦٠ مئوية للحمولة الجزئية	دقيقة		٢٥٠
ملابس قطنية ٤٠ مئوية مع الحمولة الجزئية	دقيقة		٢٣٠
الوقت الموزون في نمط التشغيل-الأيسر (P_l)	دقيقة		٨
انبعاثات الضوضاء المنقولة جواً			
غسل	dB (A) re ١ pW		٥٢
دوران	dB (A) re ١ pW		٧٤
الأبعاد			
أبعاد الوحدة	الارتفاع	مم	٨٥٠
	العرض	مم	٦٠٠
	عمق [٥]	مم	٦٠٠
الوزن الصافي	كجم		٧٣
الوزن الإجمالي	كجم		٧٥
وزن العبوة	كجم		٢
ضغط الماء	كيلو باسكال		٥٠-٨٠٠
التوصيل الكهربي			
فولتية	فولت		٢٢٠-٢٤٠
استهلاك الطاقة	وات		٢٠٠٠-٢٤٠٠
استهلاك الطاقة	هرتز		٥٠
اسم الشركة			Samsung Electronics Co., Ltd.

WW90H7410EW-03403S-03_AR.indd 41 2014/5/23 16:48:05

١. يعتمد استهلاك الطاقة السنوي على دورات الغسيل القياسية ٢٢٠ بالنسبة لبرامج ℮ القطن عند ٦٠ مئوية و٤٠ مئوية مع الحمولة الجزئية، واستهلاك لأنماط إيقاف التشغيل والتشغيل - الأيسر. سوف يعتمد استهلاك الطاقة الفعلية على كيفية استخدام الجهاز.

٢. استهلاك الماء السنوي يعتمد على دورات الغسيل القياسية ٢٢٠ لبرامج الملابس ℮ القطنية عند ٦٠ مئوية و٤٠ مئوية عند الحمولة الكاملة والحمولة الجزئية. سوف يعتمد استهلاك الماء الفعلي على كيفية استخدام الجهاز.

٣. نسبة اللف هامة للغاية عند استخدامك لمجفف الملابس من أجل تجفيفها.
طاقة التجفيف تكلف أعلى بكثير من طاقة الغسيل.
الغسيل بمعدل لف سريع يؤدي إلى توفير مزيد من الطاقة في تجفيف ملابسك في مجفف الملابس.

٤. إن برنامج الملابس ℮ القطنية ٦٠ سلزيوس وبرنامج الملابس ℮ القطنية ٤٠ سلزيوس هما برنامج الملابس القطنية القياسي ٦٠ سلزيوس وبرنامج الملابس القطنية القياسي ٤٠ سلزيوس. وهذان البرنامجان مناسبان للغسيل متوسط الإتساخ من الملابس القطنية وتعد الأكثر كفاءة بالنسبة لهذا النوع من الغسيل (بالنسبة لاستهلاك الماء والطاقة).
يُرجى تشغيل Calibration Mode (وضع المعايرة) بعد التركيب (يُرجى الرجوع إلى قسم "تشغيل وضع المعايرة (الموصى به) بصفحة ١٨).
في هذه البرامج، قد تختلف درجة حرارة المياه الفعلية عن درجة الحرارة الموضحة.

٥. المسافة إلى الحائط من الوحدة غير مشمولة في أبعاد العمق.

WW90H7410EW-03403S-03_AR.indd 42 2014/5/23 16:48:05

معلومات حول برامج الغسيل الأساسية.

الطراز	الدورة	درجة الحرارة (سلزيوس)	السعة (كجم)	فترة البرنامج (دقيقة)	محتوى الرطوبة المتبقي (٪)	استهلاك الماء (لتر/ دورة)	استهلاك الطاقة (كيلو وات/ دورة)
WW90H7410E*	قطن	٢٠	٤,٥	١٢٩	٥٠	٥٧	٠,٤٠
	قطن	٤٠	٤,٥	٢٢٩	٤٤	٤٠	٠,٥١
	قطن	٦٠	٩,٠	٢٦٩	٤١	٤٥	٠,٧٧
			٤,٥	٢٤٩	٤٤	٤٠	٠,٦٧
	اصطناعي	٤٠	٣,٥	١٣٩	٣٠	٥٣	٠,٦١

تم قياس القيم الواردة بالجدول وفق الشروط المنصوص عليها في مقياس IEC60456/EN60456. يعتمد استهلاك الطاقة الفعلية على كيفية استخدام الجهاز.

WW90H7410EW-03403S-03_AR.indd 43 2014/5/23 16:48:05

هل لديك أسئلة أو تعليقات؟

البلد	اتصل بـ	أو قم بزيارة موقعنا على الإنترنت على
U.A.E	800-SAMSUNG(726-7864)	www.samsung.com/ae/support (English) www.samsung.com/ae_ar/support (Arabic)
JORDAN	0800-22273 06 5777444	www.samsung.com/Levant/support (English)

كود رقم. DC68-03403S-03_AR